





# Contents

General information	page 03
Important!	page 04
Guarantee conditions	page 04
Disposal	page 04
Performance description	page 04
Device description	page 05
Connecting and installing the module	page 07
Quick start – starting operation of the U 118 resp. U 118-X	page 09
"Status" menu	page 16
"Main" menu	page 21
"Test generator" menu	page 24
"IP channel" menu	page 25
"IP RX" menu	page 26
"RF" menu	page 29
"RF 1.X" and "RF 2.X" menu	page 30
"Time sharing" menu	page 33
"OSD 1.X" and "OSD 2.X" menu	page 34
"SSL settings" menu	page 36
"User settings" menu	page 38
"TS analyzer" menu	page 41
"Licensing" menu	page 42
"Update/config" menu	page 43
"System log" menu	page 46
"Active Severities" menu	Seite 48
"Active alarms" menu	page 49
"Statistics" menu	page 50
"Network" menu	page 51
"Devices" menu	page 52
Troubleshooting	page 53
Maintenance and repair	page 53
Servicing	page 53
Technical data	page 54



# General information

**HINWEIS:** This operating manual was created to provide the most important instructions for operating the U 118 resp. U 118-X module. We expressly recommend reading this manual before installing or operating the devices.

The ASTRO company confirms the information in this manual to be correct at the time of printing, but it reserves the right to make changes, without prior notice, to the specifications, the operation of the device and the operating manual.

## Symbols used in these instructions

Pictograms are visual symbols with specific meanings. You will encounter the following pictograms in this installation and operating manual:

Warning about situations in which electrical voltage and non-observance of the instructions in this manual pose a risk of fatal injuries.





**S** 



Warning about various dangers to health, the environment and material.

Recycling symbol: indicates components or packaging materials which can be recycled (cardboard, inserts, plastic film and bags). Used batteries must be disposed of at approved recycling points. Batteries must be completely discharged before being disposed of.

This symbol indicates components which must not be disposed of with household rubbish.

## **Copyright information**

Parts of the software used with this product originate from third-party vendors and were developed under a variety of licensing conditions. Detailed information on the licences can be found on the device's web user interface. If you select the menu item "Licensing" on the web browser interface of the device, you will find a link to a page with detailed information.

You can obtain the source code for licence-free parts of the software upon request and against payment of a processing fee.

Please contact us at: kontakt@astro-strobel.de ASTRO Strobel Kommunikationssysteme Olefant 1-3 D-51427 Bergisch Gladbach (Germany) Tel.: (+49) 2204 405-0

All other parts of the software used with this product are subject to the copyright owned by ASTRO Strobel GmbH.







# **Device description**

The delivery is comprised of the following parts:

U 118 resp. U 118-X Edge FM module and backplane

Operating manual

The U 118 resp. U 118-X plug-in module and the U 100 base unit feature a CE marking. This confirms that the products conform to the relevant EC directives and adheres to the requirements specified therein.



Figure 1: U 118 resp. U 118-X

CE

Figure I, top: U I18 resp. U I18-X, installed in the U 100 base unit (fitted with three plug-in modules)

Figure I, middle:

- U 118 resp. U 118-X, front panel
- [1] Display for management IP addresses,
- data IP addresses status messages etc
- [2] Status display
- [3] Control and data knob, menu switch







# Connecting and installing the module

**NOTE:** How to prepare the base unit for installing the module is described in the operation manual of the U 100 base unit!

## Coding and installing the backplane

A backplane is included with every U 1xx signal converter. This is used to establish a mechanical connection between the signal converter and the base unit. Both the mains HF connections and the network connections are connected to this

backplane. There is usually a temperature-controlled fan for cooling the signal converter on the backplane. This can be replaced while the device is operating.

To ensure the position of the backplane, and therefore the position of the respective signal converter in the U 100 base unit, is correct, you must plug a corresponding jumper into the circuit board on the backplane. Proceed as described in the following.



Figure 2: Coding the backplane by plugging in the bridge

[1] Left slot [2] Middle slo

[3] Right slot



# To prepare the backplane for installation, proceed as follows: Plug the bridge into the installation position provided in accordance with figure 3 (page 8).

**NOTE:** A bridge which has not been correctly plugged into the corresponding installation position will result in incorrect LED displays on the front of the U 100 base unit (see section "Device description"). Furthermore, the correct position cannot be displayed on the web browser user interface.

You can now install the backplane in the base unit. To do so, proceed as follows:



Figure 3: Installing the backplane in the base unit

[1, 2] Phillips-head screws

- [3] Cable for signal supply
- [4] Cable for power supply



## Task

- When the U 100 base unit is in its delivery state, the three installation slots for the backplanes are covered by dummy plates (see figure 3, above). Start by removing the Phillips-head screws [1] and [2] from the dummy plate at the required installation position (left, middle or right) and remove the dummy plate.
- 2. You can now see the two connection cables for the selected slot (power supply and signal cable). Connect the cables to the backplane as shown in figure 3 (above).
- 3. Now carefully insert the backplane into the slot of the U 100. Make sure the cables are not jammed. You can push the backplane into the housing by applying light pressure.

### RESULT:

The backplane is now connected and installed. Once installed, it should correspond to the figure at the left.

**NOTE:** You can learn how to connect a plug-in module to your PC or laptop by reading the operating manual for the respective signal converter.





# Quick start - starting operation of the U 118 resp. U 118-X

## Connecting the U 118 resp. U 118-X to a PC or laptop

To be able to configure the U 118 resp. U 118-X, you now need to connect the network sockets (Management A or Management B) on the backplane of the device (see figure at left) to your PC or laptop using a network cable.

Once you have connected the base unit to the power supply, the U 118 resp. U 118-X will switch on automatically. Once it has booted (approx. 180 seconds), the ASTRO logo initially appears in the display.

Turn the knob to the right of the display clockwise until the menu item "Interface settings" is displayed. The two management IP addresses (Management A and Management B) for the device now appear in the upper lines.

Make a note of the address of the management connection which you are using for your PC or laptop to ensure you can enter this in the address line of your web browser later on.

**NOTE:** Please note that your PC or laptop must be in the same sub-network as the U 118 resp. U 118-X! The sub-network mask of the U 118 resp. U 118-X is set to 255.255.255.0 upon delivery. The PC or laptop which is connected must therefore be assigned an IP address 192.168.1.x.

You can now start the configuration using the web browser user interface.

### General information on the structure of the web browser interface

The configuration interface is divided into the following sub-areas:







Management A 192.168.1.150 Management B 192.168.5.150 Data A 172.24.0.150 Data B 172.25.0.150



- Status line (header) [1]: Displays general information on the module. SW: Software status
  - FW: Current version of the software installed
  - HW: Hardware version
  - Up: Runtime since the system was booted Time: Date and time

Name, location, contact: Corresponds to the settings made in the configuration area "User settings"

- Navigation menu [2]: Displays the individual configuration areas which you can select by clicking the mouse. A detailed description of these areas can be found on the following pages of this chapter.
- Content area [3]: The respective configuration form depending on the menu item selected is displayed here.

**HINWEIS:** The browser display is not updated automatically. Use the corresponding button in the menu of your browser to update the display.

### Logging in

To log in, copy the IP address of the U 118 resp. U 118-X shown in the device display into the address line of the browser. The menu page "Status" will then appear. Select the item "Log in" from the navigation menu at the left. The input mask for the log in should then appear (see figure 4, below). In delivery state, you must use the following log-in data:

$\Box$	User name:	"user" o	or "admin" (	input without	inverted commas	)
--------	------------	----------	--------------	---------------	-----------------	---

**Password:** astro

User Authentification

Username	Password

temember that the session will be timed out after 5 minutes of inactivity

Submit Reset Form

Figure 5: Log in

After logging in, the start page of the U 118 resp. U 118-X with all relevant system information will appear. The navigation menu and the log-in status display will appear at the left.

Only one user can be logged into the user interface of the U 118 resp. U 118-X at a time. The current user is displayed in the column at the left, below the menu.

The device status is indicated by a green or red circle. If a green circle is displayed, the device is operational. If the circle is red, then a fault has occurred.

A list of current errors is available under the menu item "Active alarms".

**NOTE:** For reasons of security, you should change the access data valid upon delivery (user name and password) to prevent unauthorised access! The procedure is described in the section "Changing user data".

## **Changing the IP address**

**NOTE:** If you wish to change the IP address, then the settings on the PC must be changed accordingly. IP addresses can only be changed by the administrator!



Start by changing the IP addresses for the management and the data port. To do so, click on the item "Main" in the menu at the left. You will now see the following table in the content pane:

#### IP Interface Settings

Property	Management A (eth0)	Management B (eth1) Data A (eth2)		Data B (eth3)	
MAC	00:17:72:02:00:d0	0:17:72:03:00:d0 00:17:72:04:00:d0		00:17:72:05:00:d0	
Active	$\odot$ on $\odot$ off	e on Coff e on Coff		● on O off	
Mode	1 Gbit/s, full duplex	1 Gbit/s, full duplex	1 Gbit/s, full duplex	1 Gbit/s, full duplex	
Address	192 168 1 150	192 168 5 150	172 24 0 150	172 25 0 150	
Subnet	255 255 255 0	255 255 255 0	255 255 0 0	255 . 255 . 0 . 0	
Broadcast	192.168.1.255	192.168.5.255	172.24.255.255	172.25.255.255	
Gateway	192 168 1 100	0 0 0 0	0 0 0 0	0 0 0 0	

Figure 6: Changing the IP address

You can enter the IP addresses for management ports A and B as well as for data ports A and B in the "Address" line. Make sure that you activate the ports being used by activating the corresponding radio button in the line "Active".

To save your changes, click on the "Submit" button below the last table.

More information on configuring the IP address can be found in the section "Configuring IP interfaces, IP management and base unit".

The signal flow in the U 118 resp. U 118-X

The overview on page 10 shows the possible signal paths for the U 118 resp. U 118-X. The specific signal flow can be divided into the following sub-areas:

- The IP receivers (1 to 8) receive a signal via data port A or B (each is switchable).
- There are two PAL modulators, each of which features a transport stream selector for selecting a transport stream for each PAL program.
- The level of the output signals from the two PAL modulators (each with 4 PAL programs) are each adapted, filtered and amplified, and are forwarded to an HF output on the backplane.







Figure 7: The signal flow in the U 118 resp. U 118-X



## **Configuring the IP receiver**

Now start configuring a signal path in the U 118 resp. U 118-X. Start by clicking on the item "IP RX 1" in the web browser interface menu. You will now see the following table:

### IP RX1 Channel Settings

Property	Data A (eth2) 1	G
Primary Receive IP:Port	232 . 19 . 100 . 136 : 10000	Priority
Primary Source Select	0.0.0.0	12 Highest/Hot 💌

Figure 8: Setting the source for the data stream

Enter the IP address and port for the data source in the first line. Optionally, you can also enter a source select address in the second line.

Further information about configuring the receiver can be found in the section "Configuring IP inputs". There is another table below the "IP RX 1 Channel Settings" table. Activate the radio button "on" to enable the receiver.

Property	Data A (eth2) + Data B (eth	3)
Enable	⊙ on ○ off	
Port	Data A 💌 Primary 💌 static 💌	
Timeouts	in case of failure switch after 0 seconds, switch back to h	igher priority after 300 seconds
Error condition	O data rate only ⊙ data rate, continuity count, service	
Encapsulation	RTP/UDP/IP C UDP/IP	💿 automatic 🔿 manual
Bitrate	Single PCR (SPTS) Mult. PCR (MPTS)	💿 automatic 🔾 manual
FEC	⊙ on ○ off	
TSID / ONID	1107	1
Alias manual / automatic		SAT.1, ProSiebenSat.1



### Checking the data reception rate

Now click on the menu item "Status" in the menu at the left. You will now see the following overview:

Ethernet							
	Property	Management A (eth0)	Management B (eth1)	Data A (eth2)	Data B (eth3)		
	МАС	00:17:72:02:00:d0	00:17:72:03:00:d0	00:17:72:04:00:d0	00:17:72:05:00:d0		

			· · · ·	· · ·
MAC	00:17:72:02:00:d0	00:17:72:03:00:d0	00:17:72:04:00:d0	00:17:72:05:00:d0
Address	192.168.1.150	192.168.5.150	172.24.0.150	172.25.0.150
Netmask	255.255.255.0	255.255.255.0	255.255.0.0	255.255.0.0
Gateway	192.168.1.100	0.0.0	0.0.0.0	0.0.0.0
Mode	1 Gbit/s, full duplex			
Transmit	0.0 Mbit/s	0.0 Mbit/s	76.6 Mbit/s	76.6 Mbit/s
Receive	0.0 Mbit/s	0.0 Mbit/s	70.9 Mbit/s	70.9 Mbit/s

Figure 10: Displaying reception statistics

A data reception rate > 0 at data ports A or B should now appear in the line "Receive" in the "Ethernet" table.



Now click on the menu item "Statistics" in the menu at the left. Details about the transport stream received are provided in the "Ethernet RX" table. A TS rate of > 0 should be displayed. If this is not the case, check the receiver settings.

### Ethernet RX

Channel	Encap	TS Rate	Buffer depth	FEC	Valid	Missing	Fixed	Duplicate	Reordered	Out of range
IP RX1	1328 bytes 7 packets RTP/UDP/IP	33.8 Mbit/s Mult. PCR	255 Frames 49.8 % 79.5 ms	none	4410949	0	0	0	0	0

Figure 11: IP receiver statistics

## **Configuring HF output channels**

To complete the process, you should configure and activate the HF output channels. To do so, click on the menu item "RF" in the web browser interface menu. You will now see the following table:

#### **RF** Channels

Modulator	Enable	Service	Chann Freque	el ncy	Lev	rel	Channei Filter	Reference	Status
	💿 nn		E55 743.2						
<u>RF1.1</u>	<ul> <li>standby</li> </ul>	KiKA HD, ZDFvision (SID:11160 advanced codec HD digital television)	743 250000	MHz	0.0	dB		0-1	ok
	○ off		0.000	kHz on off	Set				
	💿 on		E56 751.2	1			fitted	uncal.	
<u>RF1.2</u>	O standby	N24, ProSiebenSat.1 (SID:17503 digital television)	751.250000	MHz	0.0	dB		undef.	ok
	O off		0.000	kHz					
	💿 an		E57 759.2						
RF2.1	O standby	Das Erste, ARD (SID:28106 digital television)	759.250000	MHz	0.0	dB	🔾 on 💿 off	Cet	ok
	Ooff		0.000	kHz			min:	Sei	
	• nn		E58 767.2				max:	uncal.	
RF2.2	O standby	ProSieben, ProSiebenSat1 (SID:17501 digital television)	767 250000	MHz	0.0	dB	unset	undef.	ok
	O off		0.000	kHz					

Changing service will affect primary, secondary and tertiary sources.

	Localisation	Available	an SD C
Channel list	de	de fr ru uk	us be
Submit	Reset For	2	
Oubmit	110301101		
Sec. Card			
RF Detecto	r	_	
RF Detecto	r	Mode	Level
RF Detecto warnings	r	Mode • on • off	Level ±2.5 dB

Lock RF relevant settings on off

Submit Reset Form

ASTRO Strobel Kommunikationssysteme GmbH

Figure 12: Configuring HF output channels





To exemplify this, select one of the modulators by clicking on the "On" radio button in the "Enable" column.

Now select the preferred service from the drop-down menu in the "Service" column. Enter the preferred values for the frequency and the level in the corresponding input field in the "Channel Frequency" and "Level" columns respectively.

To save your changes, click on the "Submit" button below the table.

More information on setting the HF modulators can be found in the section "Menu RF".



# "Status" menu

To have the current settings for the U 118 resp. U 118-X displayed, click on the Status item in the menu at the left. You can now see the overview shown in figure 13:

Ethernet				
Property	Management A (eth0)	Management B (eth1)	Data A (eth2)	Data B (eth3)
MAC	00:17:72:02:00:f2	00:17:72:03:00:f2	00:17:72:04:00:f2	00:17:72:05:00:f2
Address	192.168.1.176	192.168.5.176	192.168.3.176	192.168.4.176
Netmask	255.255.255.0	255.255.255.0	255.255.255.0	255.255.255.0
Gateway	192.168.1.100	0.0.0	0.0.0.0	0.0.0.0
Mode	1 Gbit/s, full duplex			
Transmit	0.2 Mbit/s	0.0 Mbit/s	0.0 Mbit/s	0.0 Mbit/s
Receive	0.0 Mbit/s	0.0 Mbit/s	168.4 Mbit/s	0.0 Mbit/s

IP	RX	Channels	

Channel	Interface	Prim. RX IP socket source	Sec. RX IP socket source	Ter. RX IP socket source	Encapsulation	FEC	TS Rate	TSID ONID	Alias
ID DV4	Data A	232.16.100.130:10000 0.0.0.0	16.100.130:10000 0.0.0:0 0.0.0:0 1328 bytes		0000	33.8 Mbit/s	1107	SAT 1 DroSiphonSat 1	
IP RX1	Data B	232.16.100.130:10000 0.0.0.0	0.0.0.0 0.0.0.0	0.0.0.0:0 0.0.0.0	RTP/UDP/IP	none	Mult. PCR	1	awith, Problebenaath
	Data A	232.16.100.129:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	1328 bytes 7 packets RTP/UDP/IP	none	42.6 Mbit/s	1010	Seat UD 705vieion
IP RXZ	Data B		0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0		none	Mult. PCR	1	USACHD, ZDF VISIUN
	Data A	232.20.100.132:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	1328 bytes 7 packets no RTP/UDP/IP		38.2 Mbit/s	1079	7DE 7DE islan
IF RAD	Data B	232.20.100.132:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0		RTP/UDP/IP	none	Mult. PCR	1
	Data A	232.20.100.133:10000 0.0.0.0	0.0.0.0:0 0.0:0.0	0.0.0.0:0 0.0.0.0	1328 bytes I	L(Cols) 20 D(Down) 6	38.2 Mbit/s	1101	Dos Ersta ADD
IP RX4	Data R		0.0.0.0:0	0.0.0.0:0	PTP/ IDP/P	Col only	Mult. PCR	1	Das Liste, ARD



Modulator	Stream	Service	PIDs	Channel Frequency Level	Reference	Status
<u>RE1.1</u>	IP_RX2 TSID:1010 ONID:1 Alias:3sat HD, ZDFvision	KIKA HD, ZDFvision (advanced codec HD digital television) SID:11160	PCR:6610 Video:6610 H264 Audio A:6622 Audio B:6621 Dual A+B TTX:6630	E55 743.250000 MHz 0.0 dB	uncal.	ok
<u>RF1.2</u>	IP_RX1 TSID:1107 ONID:1 Alias:SAT.1, ProSiebenSat.1	N24, ProSiebenSat.1 (digital television) SID:17503	PCR:1023 Video:1023 MPEG2 Audio A:1024 Stereo	E56 751.250000 MHz 0.0 dB	under.	ok

Figure 13: Status display

The following tables are displayed:

## Ethernet status:

Configuration data and status of the Ethernet port

### Ethernet

Property	Management A (eth0)	Management B (eth1)	Data A (eth2)	Data B (eth3)
MAC	00:17:72:02:00:d0	00:17:72:03:00:d0	00:17:72:04:00:d0	00:17:72:05:00:d0
Address	192.168.1.150	192.168.5.150	172.24.0.150	172.25.0.150
Netmask	255.255.255.0	255.255.255.0	255.255.0.0	255.255.0.0
Gateway	192.168.1.100	0.0.0.0	0.0.0.0	0.0.0.0
Mode	1 Gbit/s, full duplex			
Transmit	0.0 Mbit/s	0.0 Mbit/s	76.6 Mbit/s	76.6 Mbit/s
Receive	0.0 Mbit/s	0.0 Mbit/s	70.9 Mbit/s	70.9 Mbit/s

Figure 14: Status display - Ethernet



The values for the following parameters are displayed and configured here respectively in accordance with the four connections on the backplane of the U 118 resp. U 118-X (Data A, Data B, Management A and Management B, see section "Device description").

- MAC: MAC address (display value)
- Address: IP address (configurable)
- Netmask: Net mask (configurable)
- Gateway: Gateway IP address (configurable)
- Mode: Ethernet mode (display value)
- Transmit: Data transmission rate (display value)
- Receive: Data reception rate (display value)

### Status display of the IP receiver:

IP RX Channels

Channe	I Interface	Prim. RX IP socket source	Sec. RX IP socket source	Ter. RX IP socket source	Encapsulation	FEC	TS Rate	TSID ONID	Alias		
I <u>P RX1</u>	Data A	232.20.100.128:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	1328 bytes 7 packets	none	37.8 Mbit/s	1093	Payers 1 APD PD		
	Data B	232.19.100.128:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	RTP/UDP/IP	RTP/UDP/IP	Mult. PCR	1	Dayeni 1, AKD DK		
	Data A 232.20.100.129:10000 0.0.0.0 0.0.0.0 1.0.0.0 1316 bytes	0000	33.9	33.9 Mbit/s	/s 1051	togosseboull4_ADD					
I <u>P RXZ</u>	Data B	232.19.100.129:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	UDP/IP	UDP/IP	UDP/IP	none	Mult. PCR	1	tagesschauz4, ARD
	Data A	232.20.100.130:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	1328 bytes 7 packets RTP/UDP/IP	1328 bytes 7 packets RTP/UDP/IP		38.2 Mbit/s	1078	DATA OVOTEM TO 20, MTV/Notuc	
IP RX3	Data B	232.19.100.130:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0			7 packets RTP/UDP/IP	TP/UDP/IP	Mult. PCR	1	DATA SYSTEM TR 70, MTV NELWO
IP RX4	Data A	232.20.100.131:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	1328 bytes		33.9 Mbit/s	1024			
	Data B	232.19.100.131:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	RTP/UDP/IP	7 packets RTP/UDP/IP	7 packets RTP/UDP/IP	7 packets none RTP/UDP/IP	Mult. PC	Mult. PCR	1

Figure 15: Status display - IP RX channels

The different text formats refer to:

- Green: active
- Grey: inactive ("off")
- Black (bold): priority "hot", no errors
- Red (bold): priority "hot", errors
- Black (standard): priority "cold", no errors
- Red (standard): priority "cold", errors

The values set for the following parameters are displayed in the table "IP RX channels" for the 4 IP receivers – for outputs Data A and B respectively:

- Prim. RX IP socket source: Primary source
- Sec. RX IP socket source: Secondary source
- Ter. RX IP socket source: Tertiary source
- Encapsulation: Data encapsulation
- FEC: Forward error correction
- 🔵 TS Rate: Data rate
- TSID ONID: Transport stream ID / original network ID
- 🗋 Alias: Alias name

For details on the parameters: see section "Menu IP RX"



## Status display of the PAL output programs:

RF Channels

Modulator	Stream	Service	PIDs	Channel Frequency Level	Reference	Status
<u>RF1.1</u>	IP_RX2 TSID:1010 ONID:1 Alias:3sat HD, ZDFvision	KIKA HD, ZDFvision (advanced codec HD digital television) SID:11160	PCR:6610 Video:6610 H264 Audio A:6622 Audio B:6621 Dual A+B TTX:6630	E55 743.250000 MHz 0.0 dB	uncal.	ok
<u>RF1.2</u>	IP_RX1 TSID:1107 ONID:1 Alias:SAT.1, ProSiebenSat.1	N24, ProSiebenSat.1 (digital television) SID: 17503	PCR: 1023 Video: 1023 MPEG2 Audio A: 1024 Stereo	E56 751.250000 MHz 0.0 dB	unuer.	ok

Figure 16: Status display - RF channels

The values set for the following parameters are displayed in the table "RF channels" for the 8 PAL output programs:

Modulator: Output program

Stream: Transport stream received

Service: Service selected

PIDs: Packet identifier

Frequency / Level: Frequency / level selected

Details on the parameters can be found in the section "Menu RF".



### Status messages on temperature, internal voltages and the power module:

#### Miscellaneous

Property	Mainboard
Temperature 1 (center)	48.5 °C
Temperature 2 (front)	50.5 °C
Temperature 3 (rear)	61.0 °C
Temperature 4 (PA)	33.5 °C
Supply 1.2 ∨	1.18 V
Supply 1.5 ∨	1.50 V
Supply 1.8 ∨	1.79 V
Supply 2.5 ∨	2.49 V
Supply 3.3 ∨	3.29 V
Supply 5.5 ∨	5.43 V
Supply 9 V	8.93 V
Fan	10384 RPM
Power Module	ок

Figure 17: Status display - Miscellaneous

The following, general parameters are displayed in the "Miscellaneous" table:

- Temperature 1 (center): Temperature displayed in °C for the mainboard
- Temperature 2 (front): Temperature displayed in °C for the mainboard
- Temperature 3 (rear): Temperature displayed in °C for the mainboard
- Temperature 4 (PA): Temperature displayed in °C for the HF output stage
- Supply 1.2 V: 1.2 V supply voltage
- Supply 1.5 V: 1.5 V supply voltage
- Supply 1.8 V: 1.8 V supply voltage
- Supply 2.5 V: 2.5 V supply voltage
- Supply 3.3 V: 3.3 V supply voltage
- Supply 5.5 V: 5.5 V supply voltage
- Supply 9 V: 9 V supply voltage
- Fan: Fan rotation speed
- Power Module: Functional status (OK or error message)



## Memory status:

Property	Value
Total size of memory arena	63213380
Number of ordinary memory blocks	126
Space used by ordinary memory blocks	795952
Space free for ordinary blocks	62417404
Size of largest free block	62377284
Number of left files FOPEN_MAX	27
Number of left files NFILE	18
Number of free file descriptors NFD	18
CPU load 0.1s	0 %
CPU load 1s	3 %
CPU load 10s	11 %

Figure 18: Status display - System resources

Information on the internal resources of the operating system can be viewed in the "System resources" table. No settings can be made here.

File resources:

- Number of left files FOPEN\_MAX
- Number of left files NFILE
- □ Number of free descriptors NFD

CPU load, averaged over XXs:

CPU load 0.1 s

CPU load 1 s

CPU load 10 s



## "Main" menu

This section explains how to make general settings for the interfaces and the management of the U 118 resp. U 118-X, as well as for the U 100 base unit. Click on the item "Main" in the menu at the left.

Setting IP interfaces (administrator only)

You can configure IP interfaces and activate or deactivate them using the table shown above ("IP interface settings"). The connection type is automatically identified and displayed by the U 118 resp. U 118-X (in this case: 1 GBit/s, full duplex).

### IP Interface Settings

Property	Management A (eth0)	Management B (eth1)	Data A (eth2)	Data B (eth3)
MAC	00:17:72:02:00:d0	00:17:72:03:00:d0	00:17:72:04:00:d0	00:17:72:05:00:d0
Active	$\odot$ on $\odot$ off	⊕ on ○ off	🖲 on 🔾 off	$\odot$ on $\bigcirc$ off
Mode	1 Gbit/s, full duplex	1 Gbit/s, full duplex	1 Gbit/s, full duplex	1 Gbit/s, full duplex
Address	192 168 1 150	192 168 5 150	172 24 0 150	172 25 0 150
Subnet	255 . 255 . 255 . 0	255 . 255 . 255 . 0	255 255 0 0	255 . 255 . 0 . 0
Broadcast	192.168.1.255	192.168.5.255	172.24.255.255	172.25.255.255
Gateway	192 168 1 100	0.0.0	0.0.0	0 0 0 0

Figure 19: Configuring IP interfaces

The following parameters are displayed, and can be configured:

- MAC: MAC address of the respective interface
- Active: Activate the radio button "on" to activate the interface. Activate the radio button "off" to deactivate the interface.
- Mode: Connection type (identified automatically)
- Address: IP address
- Subnet: Netmask
- Broadcast: Broadcast address
- Gateway: Gateway IP (if required)

**NOTE:** When programming the IP addresses, make sure the addresses have not already been allocated within your network. Address conflicts result in network malfunctions. (Please set unused parameters to 0.0.0.0.)

To save your changes, click on the "Submit" button below the last table.

### **Configuring management settings**

You can configure the following management settings in the second table ("IP management settings"):

### IP Management Settings

Property		Value
DNS	0.0.0.0	
SNTP server	0.0.0.0	0.0.0.0
Time Source	SNTP Server	<b>~</b>

Figure 20: Configuring management settings

Operating manual U 118 a. U 118-X - Version 07-2016A

Submit Reset Form

Submit

Reset Form



- DNS: Enter a DNS server, if required, in the input fields.
  - SNTP server: You can enter one or two time servers here (SNTP protocol).
  - Time Source: Select the preferred time reference from the drop-down menu. The following options are available for selection: "SNTP server" and "IP RX 1 16".

To save your changes, click on the "Submit" button below the last table.

### **Configuring the base unit**

You can enter settings for the U 100 base unit in the third table ("U 100 Rack settings").

### U100 Rack Settings

Property	Value
Base Address	0
Slot Address	2
Power Modules	0 💌
Submit	Reset Form

Figure 21: Configuring the U 100 base unit

The following parameters are displayed, and can be configured:

- Base Address: Enter an address for the base unit being used here. If the U 118 resp. U 118-X is managed using the U 100-C controller and several U 100 base units are being used, then each base unit must be allocated an address of its own. This setting must only be entered for one module per base unit.
- Slot Address: In accordance with the coding of the backplane of the U 118 resp. U 118-X performed previously (see section "Installing and connecting"), the address corresponding to the slot in the base unit is displayed here.
- Power Modules: Select the number of power modules used from the drop-down menu ("0" for 48 V operation, "1" or "2" for 230 V power modules).

To save your changes, click on the "Submit" button below the last table.

Saving and loading configurations / default and reboot

Save settings to flash / Load settings from flash / Default settings / Reboot system

	Save 2nd	Load 2nd	Default	Reboot
--	----------	----------	---------	--------

Save 2nd: All settings are saved to an alternative config. Load 2nd: All settings are loaded from an alternative config Default: Load factory default settings. Reboot. Force reboot.

Figure 22: Saving and loading configurations

Changes to the configuration of the U 118 resp. U 118-X are written to the device by clicking the "Submit" button, and are activated immediately. If you wish to save the current status to a separate memory, click on the "Save 2nd" button (below the tables). This current status is then saved to the SD card in the U 118 resp. U 118-X.

(Please note that prior to installing the module, an SD memory card must be plugged in; see figure at left.)

You can retrieve this status again by clicking on the "Load 2nd" button. How to save the configuration onto the local computer or FTP server is explained in the section "Software update and configuration files".

Click on the "Default" button if you wish to restore the default settings.



Submit

Reset Form



**ATTENTION:** If you click the "Default" button, all settings except for the user and network settings for the data and management ports are reset to the delivery state.

Click on the "Reboot" button to restart the unit with the last settings saved.



# "Test generator" menu

The U 118 resp. U 118-X features an integrated test generator for a functional test when an input signal is not yet available. Null packets are generated with a preset packet ID. The maximum data rate that can be set totals 67 MBit/s.

### Test Generator Settings

Property	Value			
Date rate	1.000	000	Mbit/s (40420)	
Packet ID	0			
Packet length	188			

Figure 23: Test generator

The following settings are displayed, and can be configured:

Data rate: Enter the preferred data rate in MBit/s in the input field.

Packet ID: Enter the packet ID here.

Packet length: Packet length is displayed.

To save your changes, click on the "Submit" button below the table.

Submit Reset Form



# "IP Channel" menu

To have the input masks for configuring the input and output channels displayed, click on the item "IP Channels" in the menu at the left.

You can check the settings for the input channels in the table at the bottom, "IP RX channel settings".

Channel	Enable	Interface	Prim. RX IP socket source	Sec. RX IP socket source	Ter. RX IP socket source	Encapsulation	TSID ONID	Alias
	📀 on	Data A	232.19.100.136:10000 0.0.0.0	232.20.100.136:10000 0.0.0.0	0.0.0.0:10000 0.0.0.0	RTP/UDP/IP	1117	
<u>P RAI</u>	🔿 off	Data B	232.19.100.136:10000 0.0.0.0	232.20.100.136:10000 0.0.0.0	0.0.0.0:10000 0.0.0.0	Mult. PCR	1	URFT, ORF
רעם חו	🔿 on	Data A	232.19.100.129:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	UDP/IP Mult. PCR		
<u>IP RX2</u> (	💿 off	Data B	232.19.100.129:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0			
	🔿 on	Data A	232.19.100.130:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	RTP/UDP/IP		
<u>IP RX3</u>	💿 off	Data B	232.19.100.130:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	Single PCR		
	🔿 on	Data A	232.19.100.132:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0 0.0.0.0	RTP/UDP/IP		
<u>IP RX4</u>	⊙ off	Data B	232.19.100.132:10000 0.0.0.0	0.0.0.0:0 0.0.0.0	0.0.0.0:0	Mult. PCR		

IP RX Channel Settings

Figure 24: IP RX channel settings table

You can activate or deactivate the respective IP inputs here by clicking on the corresponding radio button. The following parameters are displayed for ports A and B respectively for the four IP input channels:

- Prim. RX IP socket source
- Sec. RX IP socket source
- Ter. RX IP socket source

🗌 Encapsulation TSID / ONID

🗌 Alias

**NOTE:** These parameters are explained in more detail in the section "IP RX menu".

Submit	Reset Form

If you change the activation or deactivation status of inputs or outputs in one of the two tables, then click on the "Submit" button below the last table to save your changes. Click on "Reset form" to restore the original settings.



# "IP RX" menu

To configure the 8 IP inputs, start by clicking on the item "IP RX 1", "IP RX2", "IP RX3", "IP RX4" etc. in the menu at the left. The following table will then appear in the content area at the top:

## IP RX1 Channel Settings

Property	Data A (eth2) 10	3
Primary Receive IP:Port	232 . 19 . 100 . 136 : 10000	Priority
Primary Source Select	0.0.0.0	12 Highest/Hot 💌
Secondary Receive IP:Port	232 . 20 . 100 . 136 : 10000	Priority
Secondary Source Select	0.0.0.0	11 Higher/Hot 🛛 💌
Tertiary Receive IP:Port	0.0.0.0.1000	Priority
Tertiary Source Select	0.0.0.0	0 Off 💌

Figure 25: Table 1 "IP RX1 channel settings"

"Receive IP" and "Port" (see lines 1, 3 and 5 in the table) form a socket on which the incoming data stream is received. This also allows the Receive IP address to be a multicast address or a unicast address of its own.

The IGMP protocol is used to request an IP multicast. If version 3 of this protocol is used, then you can select a specific source using the Source Select IP address (see lines 2, 4 and 6 in the table). If this function is to remain unused, please enter four zeroes in the input field. (This is, for example, the case when IGMP version 2 or IBMP version 3 from any source is being used as the protocol).

You can make a priority setting for the primary, secondary and tertiary IP address / port respectively using a drop-down menu. There are 13 options (from "off" to "highest/hot") available for selection. The priorities are divided into three groups:

Hot standby (higher priorities) Levels 7 - 12: data streams are requested permanently

Cold standby (medium priorities): Levels 1 - 6

"Off"

As a rule – providing there are no network provider problems – the data stream with the highest priority is received and used for processing. In the event of a fault – failure of the incoming signal – a switch-over is made to the data stream with the next-highest priority.

If a priority level from the "Hot standby" group is allocated to a data stream, then this will continue to be requested even during network provider problems. As soon as the problem has been rectified, it switches back to this data stream.



### Another table is shown in the following in which valid settings can be entered for Data Port A and B.

Property	Data A (eth2) + Data B (eth3)						
Enable	⊙ on ○ off						
Port	Data A 💌 Primary 💌 static 💌						
Timeouts	in case of failure switch after 0 seconds, switch back to hig	her priority after 300 seconds.					
Error condition	igodot data rate only $igodot$ data rate, continuity count, service						
Encapsulation		) automatic 🔿 manual					
Bitrate	Single PCR (SPTS) Mult. PCR (MPTS)	) automatic 🔾 manual					
FEC	⊙ on ○ off						
TSID / ONID	1107 1						
Alias manual / automatic	S	AT.1, ProSiebenSat.1					

Figure 26: Table 2 "IP RX1 channel settings"

Enable: Activate or deactivate the IP input by clicking on the corresponding radio button.

```
Port : Configure the reception source for the IP channel here.
```

Select either Port Data A or Data B from the first drop-down menu.
Select either the "Primary", "Secondary" or "Tertiary" option from the second drop-down menu.
Select the "static" option from the third drop-down menu if you do not wish to use an automatic
replacement circuit for the data streams. Select the "automatic" option when the replacement
circuit should be used as described above.

Timeouts: Enter a time frame, in seconds, in the first input field after which a switch-over to the data stream with the next-lowest priority should occur in the event of a fault. Enter a time frame, in seconds, in the second input field after which it should switch back to the data stream with the higher priority after the problem has been rectified. (This is only the case when a priority level from the "Hot standby" group was allocated to the data stream - see explanation above).

Error condition: If the data rate should be the only factor in the event of a fault, activate the radio button "data rate only". Otherwise, select the radio button "data rate, continuity count, service".

Encapsulation: When the radio button "RTP / UDP / IP" has been activated, the corresponding RTP / UDP / IP data streams are received. If you activate the radio button "on" in the line "FEC", then the additional receive IP ports +2 and +4 will be received (example: apart from 10000, also 10002 and 10004). Additional redundancy information for fault correction is included in this. When the radio button "UDP / IP" has been activated, either UDP / IP data streams or RTP / UDP / IP data streams without an evaluation from RTP are received.

Select either "automatic" or "manual" for the data encapsulation by clicking the corresponding radio button.

Bitrate: Select either "automatic" or "manual" by clicking the corresponding radio button. If "manual" is selected and the radio button "Single PCR" has been selected at the same time, then the receive data stream is regulated using a single PCR. This is not suitable for transport streams with several PCRs.

If you activate the radio button "Multi PCR", then the data rate is used for regulation. This is not possible for data streams with a variable bit rate.

- FEC: Activate or deactivate the FEC by clicking the radio button "on" or "off". (See "Encapsulation" above.)
  - J TSID / ONID: The respective value is displayed but cannot be changed.
- Alias manual / automatic: You can enter an alias name for the data stream in the input field at the left. The automatically generated alias name is displayed at the bottom right. This is the name of the first transmitter in the data stream. This is used if no name is entered manually.

Click on the "submit" button below the last table to save the changes. Click on "Reset form" to restore the original settings.



## 'RF" menu

To configure the PAL outputs, start by clicking on the "RF" item in the menu at the left. The following table will then appear in the content area at the top, in which the most important settings for all output channels can be entered.

Modulator Enable		Service		Channel Frequency		Level		Channel Filter	Reference	Status
<u>RF1.1</u>	<ul> <li>on</li> <li>standby</li> <li>off</li> </ul>	ZDF, ZDFvision (SID:28006 digital television)		S8 - 154.250000	0 KHz MHz	0.0	dB			ok
<u>RF1.2</u>	<ul> <li>on</li> <li>standby</li> <li>off</li> </ul>	Nickelodeon, MTV Networks Europe (SID:28680 digital television)	+	S9 161.250000	0 kHz MHz	0.0	dB	on e off	Set	ok
<u>RF1.3</u>	<ul> <li>on</li> <li>standby</li> <li>off</li> </ul>	WDR HD Köln, ARD (SID:28325 advanced codec HD digital television)		S10 168.250000	0 kHz MHz	0.0	dB	fitted	uncal. undef.	ok
<u>RF1.4</u>	on standby off	WDR Köln, ARD (SID:28111 digital television)	+	E5 175.250000	0 kHz MHz	0.0	dB	В		ok
<u>RF2.1</u>	on standby off	SWR Fernsehen BW, ARD (SID:28113 digital television)	-	E6 - 182.250000	0 kHz MHz	3.8	dB			ok
<u>RF2.2</u>	<ul> <li>on</li> <li>standby</li> <li>off</li> </ul>	ProSieben, ProSiebenSat.1 (SID:17501 digital television)	+	E7 189.250000	0 kHz MHz	3.8	dB	on e off	Set	ok
RF2.3	on standby off	tagesschau24, ARD (SID:28721 digital television)	-	E8 196.250000	0 kHz MHz	0.0	dB	fitted	uncal. undef.	ok
<u>RF2.4</u>	<ul> <li>on</li> <li>standby</li> <li>off</li> </ul>	zdf_neo, ZDFvision (SID:28014 digital television)	+	E9 203.250000	0 kHz MHz	0.0	dB			ok

Figure 27: Table 2 "RF channels"

- Enable: To activate or deactivate an output channel, click the corresponding radio button. If you select the "Standby" option, the decoder will run, but the corresponding output will be switched off. This may be practical when, for example, the module is being used as a replacement module in a redundant circuit.
- Service: Select the preferred service from the drop-down menu. Activate the "Show all service types" checkbox below the table to have a complete list of all services available displayed in the drop-down menu.
- Channel Frequency: When using the U 118 only for channels 1.1 und 2.1 a value can be chosen from the drop down list. The other three channels of each output are automatically adjusted to the selection made for the first channel within a frequency range of 32 MHz. Alternatively you can type a frequency value into the input field.

When using the 118-X the desired frequency can be chosen for any of the channels via a drop down list in the frequency range of 80 MHz. If this frequency range is exceeded due to the chosen frequency values a warning notice will pop up. You then must change the selection accordingly.

- Level: Enter the preferred output level for the service in the input field.
- Channel Filter: If you wish to activate a channel filter, select an item from the "min." or "max." drop-down menus and activate the radio button "on". Note that the channel filter for the corresponding output channel must be connected (see figure at left).
  - Reference: Click on the "Set" button to select the value entered within the modulation parameters as the reference. A 2.5 dB deviation from the output signal will result in a warning message being issued.

A table follows in which you can use the input field "Localisation" to select the language version of the channel list. "us" (USA), "de" (German), "fr" (French), "ru" (Russian) and "be" (Belgium) are available. Click on the "submit" button below the last table to save the changes. Click on "Reset form" to restore the original settings.







The table "RF Detector" is found below the table "RF Channels".

RF Detector

	Mode	Level
warnings	💿 on 🔿 off	±2.5 dB
security switch off	🔿 on 💿 off	+3.0 dB
Lock RF relevant settings	🔿 on 🖲 off	

Figure 28: "RF Detector" table

You can activate or deactivate the warning message for the level deviation by clicking on the corresponding radio button.

You can also block access to HF-relevant settings here.

Click on the "submit" button below the last table to save the changes.

Click on "Reset form" to restore the original settings.





# "RF 1 X" and "RF 2 X" menu

To enter detailed settings for the individual output channels, start by clicking on one of the menu items "RF 1.1 to RF 1.4" or "RF 2.1 to RF 2.2". The following table now appears in the upper part of the content area:

### Service Settings

KIKA HD,	KiKA HD, ZDFvision (advanced codec HD digital television)				Primary active	Secondary	Tertiary	
	Transport Stream				SID	SID	SID	
IP_RX2 T	IP_RX2 TSID:1010 ONID:1 Alias:3sat HD, ZDFvision 💽 1				11160	11160	11160	
ES	Use	Lang	uage	Codec		PIDs	PIDs	PIDs
PCR						0	0	0
Video				MPEG4/A	~	0	0	0
Audio A		deu		AC3	•	0	0	0
Audio B	ullet automatic $igcodot$ off	mis		MPEG	•	0	0	0
Teletext	💿 automatic 🔿 off					0	0	0
Subtitling	$\odot$ automatic $\bigcirc$ off					0	0	0

*Figure 29: "Service settings" table* 

You can select the program to be converted to PAL here. This programme can be converted from any of the 8 IP receivers. The following, individual settings can be entered.

- Transport Stream: Select the preferred transport stream from the drop-down menu.
- Primary active: Enter the primary active SID and PIDs (PCR, Video, Audio A, Audio B, Teletext, Subtitling) for the transport stream selected in the input fields here.
- Secondary: Enter the secondary SID and PIDs (PCR, Video, Audio A, Audio B, Teletext, Subtitling) for the transport stream selected in the input fields here.
- Tertiary: Enter the tertiary SID and PIDs (PCR, Video, Audio A, Audio B, Teletext, Subtitling) for the transport stream selected in the input fields here.

Enter the value 0 in the "SID" input field if the PID should be selected manually.

You can select the preferred Codec for the parameters "Video", "Audio A" and Audio B" from the corresponding drop-down menu.

You can enter the preferred language versions for the parameters "Audio A", "Audio B" and "Subtitling" in the corresponding input field.

You can switch automatic usage on or off for the parameters "Audio B", "Teletext" and "Subtitling" by clicking on the corresponding radio button.

Click on the "submit" button below the last table to save the changes. Click on "Reset form" to restore the original settings.

Submit Reset Form



Another table follows in which you can complete all the settings relating to the PAL output signal.

fodulation							
Property			Value	e			
r∨ System	PAL BG (A2)	Colour PAL 🕑 Field ID	Lines 625i/50 💌	VBW 5 MHz 🕑	Residual Carrier 11.0 %	Modulation negative 💌	
/PS	💿 on 🔾 off	CNI Code 0x fff (0xfff	f is automatic)				
/ideo Format	16:9->4:3 Conversion lett	erbox 16:9 💌	WSS Mode autom	atic 💌			
lest Lines	CCIR17 17 💌	CCIR18 330 💌	CCIR330 18 💌	CCIR331 off 💌	Ramp off 💌	sin(x)/x 331 💌	
Ist Audio	Modulation FM 🕑	Frequency 5.5000000 MHz	Level -13.0 dB	Deviation -4.2 dE			
2nd Audio	Modulation FM (A2) 💌	Frequency 5.7421875 MHz	Level -20.0 dB	Deviation -4.2 dE	Mode A+B-> Stereo/Dual (	ayn™	
Expert Settings	Video Filter off 💌	Chroma Shift 1 px left 💌					
Submit	Reset Form						

Refresh

STRO Strobel Kommunikationssysteme GmbH

Figure 30: "Modulation" table

The following individual settings can be entered.

- TV System: Select the preferred TV system from the drop-down menu. If you select the item "manual", you can select individual parameters separately: - "Colour" (colour standard; PAL, SECAM or NTSC)

  - "Lines" (number of lines 625/50 or 525/60)
  - "VBW" (picture frequency 4.2 or 5 MHz)
  - "Residual carrier" (residual carrier; input in %)
  - "Modulation" (type of modulation; positive or negative)
- UPS: Activate or deactivate the signal for video programming by activating the corresponding radio button. Enter the CNI code (country and network identifier) in the input field.
- Uideo Format: Select the preferred format conversion from the drop-down menu ("Letterbox" or "Anamorphic"). Then select the WSS mode from the drop-down menu. The following options are available for selection:
  - "automatic" (preset; WSS Info from TS)
  - "off"
  - "decoder"
  - "fx 4:3" (fixed format; 4:3)
  - "fx converted" (fixed format; depending on the conversion setting, 16:9 or anamorphic)
- Test Lines: Select the preferred settings from the respective drop-down menus: - "CCIR17", "CCIR18", "CCIR330", "CCIR331", "Ramp" and "sin(x)/x" (off, 17, 18, 330 or 331 respectively)
- 1st Audio and 2nd Audio: Enter the preferred audio hub in the input field "Deviation". Then set the preferred audio mode in the drop-down menu. The following are available for selection:
  - "A > Mono L + R"
  - "A > Mono L"
  - "A > Dual (L is main)"
  - "A > Dual (R is main)"
  - "Automatic"
  - "A + B > Dual (static)"
  - "A + B > Stereo/Dual (dynamic)"



Expert Settings: Select one of the settings "off", "1", "2" or "3" for the video filter. You can also shift the chrominance (chromacity) for the luminance pixel by pixel. The following options for the chroma shift are provided in the corresponding drop-down menu:

- "3 px left" "2 px left" "1 px left" "off"

- "1 px right"
  "2 px right"
  "3 px right"



Click on the "submit" button below the last table to save the changes. Click on "Reset form" to restore the original settings. If you click on the "Refresh" button, all information in the table is updated.



## "Time Sharing" menu To enter settings for the time sharing, start by clicking on the item "Time Sharing" in the main menu at the left. The following tables now appear in the upper part of the content area: RF1.1 - KiKA HD, ZDF vision (advanced codec HD digital television), SID:11160 Rule Switch RF Weekdays Time Action add\_0\_0 RF1.2 - N24, ProSiebenSat.1 (digital television), SID:17503 Rule Switch RF Weekdays Time Action 1 add 1 O copy inverse from RF1.1 RF2.1 - Das Erste, ARD (digital television), SID:28106 Rule Switch RF Weekdays Time Action add\_2\_0 RF2.2 - ProSieben, ProSiebenSat.1 (digital television), SID:17501 Rule Switch RF Weekdays Time Action add\_3\_0 copy inverse from RF2.1 Submit Reset Form Figure 31: Overview of the current time sharing settings The current time zone settings for the individual HF modulators are displayed here. Click on the link in the "Action" column to allocate a time setting to an output channel. The settings for RF 1.1 can be copied inversely for RF 1.2 by activating the corresponding checkbox. To copy settings from RF 2.1 to RF 2.2, proceed the same way. Click on the "Submit" button below the table to save the changes. Submit Reset Form Click on "Reset form" to restore the original settings. Another table follows in which you can configure the changeover to daylight savings time or standard time. Time zone settings Zone Rule STD On the last 🖌 Sun 💌 in Oct 🖌 at 01 : 00 UTC switch to offset +01 00 relative to UTC DST On the last 🖌 Sun 💌 in Mar 💌 at 01 00 UTC switch to offset +02 00 relative to UTC Local time is: 11 Apr 2014 10:00:37 DST (daylight saving time) Reset Form Submit Figure 32: Overview of the current time sharing settings Use the drop-down menu in the left part of the table to define the date and time for the time change. The input fields in the right part of the table allow you to enter the time change in hours and minutes respectively.

Click on the "Submit" button below the table to save the changes. Click on "Reset form" to restore the original settings.

Submit

Reset Form



# "OSD 1 X" and "OSD 2 X" menu

If you wish to enter the settings for the on-screen display (OSD) for one of the modulators, start by clicking on one of the corresponding menu items in the main menu at the left: "OSD 1.1" to "OSD 1.4", resp. "OSD 2.1" to "OSD 2.4". The following tables now appear in the upper part of the content area:

Property			Value
Enable	○ off ● on ○ schedule	Period 0 minutes	shown at begin of period for 0 minutes (set 0 to disable)
Text 1	U116 rechts RF - 1 - IP 160		
Text 2			
Position	Vertical centre bot - 385		Reading direction <sup>⊙</sup> L→R <sup>○</sup> R→L
Text	Colour white	Transparency solid	Speed 10 (0 for centred text)
Border	Colour black 👻	Transparency solid	Size 3
Background	Colour black 👻	Transparency 25%	
Still picture	<ul> <li>off ● on ○ schedule</li> <li>mute</li> </ul>	X Position 0	Y Position 0 X Size 160 Y Size 128

Figure 33: "OSD normal condition" table

OSD normal condition

You can configure all the current OSD settings for normal conditions here. The following individual settings are available for selection:

- Enable: Click on the radio button "on" or "off" to activate or deactivate the OSD. Enter a display interval, in minutes, for starting the OSD in the "Period" input field. You can enter the display period in minutes in the input field to the right.
- Text 1, Text 2: Enter the preferred text in the input fields.
- Position: From the drop down list "Vertical" select the desired alignment of the OSD. Activate the corresponding radio button to choose the preferred direction (from left to right or from right to left).
- Text: Choose the desired text colour from the drop down list "Colour". In the drop down list "Transparency" you can select the desired of shade of transparency. In the input field "Speed" type in the preferred velocity of text movement. You can type in a value between 0 and 10 (0 will lead to a static text display).
- Border: Here you can define a border for the text. Choose the desired border colour from the drop down list "Colour". Select the shade of transparency from the drop down list "Transparency". Type in the width of the border into the input field "Size".
- Background: Here you can define a background colour for the text. Choose the desired colour from the drop down list "Colour". In the drop down list "Transparency" you can define the shade of transparency of the background.
- Still picture: Click on the radio button "on" resp. "off" to activate or deactivate a background picture. You also can define a timer based superimposition. To insert a picture, click on the link to the "Update"-Menu. Then click on the desired file in the table Config files" ("still1.jpg" "still4.jpg") to insert it into the OSD.

You can define the position of the picture by typing the desired values into the input fields "X Position" and Y Position". Choose the dimensions by typing the desired values into the input fields "X Size" und Y Size".

Submit Reset Form

Click on the "Submit" button below the table to save the changes. Click on "Reset form" to restore the original settings.

Another table follows in which an overview of the programmed time settings for alternative OSD texts



is displayed.

OSD schedule

Rule	Switch OSD	Weekdays	Time	Action				
1				add_0				
Local time is: 11 Apr 2014 10:00:35 DST (daylight saving time)								
Submit Reset Form								

Figure 34: "OSD schedule" table

You can configure an alternative on-screen text display, for example, for the event of a fault in the table "OSD error condition" (further below).

OSD error condition

Property	Value									
Text										
Time	0 s									
<u>Picture</u>	🔿 on 💿 off	X Position 0	Y Position 0	X Size 0	Y Size 0	Transparency 0				
Submit	t Reset Form	ו								

Figure 35: "OSD error condition" table

The following settings can be entered here:

Text: Enter the preferred text in the input field.

- Time: Enter the preferred display time in seconds in the input field.
- Picture: Activate or deactivate a picture display by clicking on the corresponding radio button. Enter the preferred coordinates for the picture positioning, as well as the transparency value, in the input fields.



# "SSL Settings" menu

**NOTE:** A licence is required to use the SSL functions.

To enter SSL settings, click on the item "SSL Settings" in the main menu at the left.

There is a checkbox in the upper table "SSL Settings" which displays the rerouting of HTTP requests to the secured version HTTPS. After input of the licence, the checkbox is activated.



Figure 36: "SSL Settings" table

In the following table, "Generate a CSR for this device", individual items of information about the device can be entered ("Certificate Signing Request": address, organisation, etc.).

### Generate a CSR for this device

CSR Attribute	Value
Private key in use	generated by device
Country (C)	DE
State (ST)	
Locality (L)	
Organization (O)	
Organizational Unit (OU)	
Common Name (CN)	192.168.1.153
Generate CSR with above data	Download CSR

Figure 37: "Generate a CSR for this device" table

By clicking the "Download CSR" button, you can create a "Certificate Signing Request" with which your CA can issue a certificate for the device. The input field "Private key use" shows you whether the device's own key, or the key which was entered and saved, is being used.

There is a third table, "Key and certificate settings", below this.

### Key and certificate settings

Upload device key in PEM format	Durchsuchen Keine Datei ausgewählt.	Upload key
Clear supplied key	Clearkey	
Upload device certificate in PEM format	Durchsuchen Keine Datei ausgewählt.	Upload certificate
Clear supplied certificate	Clear certificate	
Regenerate device key and certificate	Regenerate	

Submit Reset Form

*Figure 38: "Key and certificate settings" table* 



This table allows you to:

- Upload a device key (click on the "Search" button and select the preferred file; then click on the "Upload key" button)
- Delete an existing device key (click the "Clear key" button)
- Upload a device certificate (click on the "Search" button and select the preferred file; then click on the "Upload certificate" button)
- Delete an existing device certificate (click the "Clear certificate" button)
- Regenerate a device key and device certificate (click the "Regenerate" button)

Submit Reset Form

If you change the activation or deactivation status of inputs or outputs in one of the two tables, then click on the "Submit" button below the last table to save your changes. Click on "Reset form" to restore the original settings.

The device administers two keys/pairs of certificates: "generated" and "user". The following figure shows which certificate and which key are used.



Figure 39: Using the certificates/keys



# "User Settings" menu

Click on the menu item "User Administration" in the main menu at the left to have the corresponding input mask displayed. The input mask shown in figure 38 now appears.

Property		Username	New Password	Retype New Password	Delete				
Admin account	admin								
User account 1	user								
User account 2	contro	ller							
User account 3									
Timeout	5	minutes							
Name	ASTR	O EdgeDecrpt U194							
Location	Heade	end in Cablecity							
Contact	John D	John Doe, admin@example.com							

Figure 40: User administration

You can create up to four users for the user interface of the U 118 resp. U 118-X. The following three users have been created as the default setting:

- user
- admin
- controller

The password for all three users is "astro".

To change the access data for a user account, or to create a new one, enter the preferred user name in the input field User name. Then enter the preferred password in the input field New Password, and confirm it by typing it in the input field Retype New password again.

**NOTE:** A password must contain at least 5 characters. If the checkbox "Enforce password policy" is activated, a password must contain at least 8 characters and special types of characters.

To delete a user account, activate the corresponding checkbox  ${\tt Delete}$  for the respective account in the right column of the table.

The following settings can also be entered:

Timeout: You can enter a time for the automatic logout, in minutes, in this input field. If no more inputs are made in the user interface, then automatic logout will occur once the time entered here has elapsed.

The time remaining until automatic logout is displayed under the main menu, in the left column of the user interface.

- Name, Location, Contact: You can save a name for the system, the location and the contact data for a person in these input fields. They are displayed in the status line.
- Enforced Password Policy: Activate the checkbox when a password should have a minimum of 8 characters, and include at least one lower-case letter, one upper-case letter, one number and one special character.
- Disallow anonymous access: Activate the checkbox when access to the content area (tables) should only be possible after logging in.

**IMPORTANT:** All changes will only become effective after you have clicked on the "Submit" button below the input mask. Click on the "Reset Form" button to delete the input values again.

Submit Reset Form



Another table follows in which you can enter information for a RADIUS server. A licence is also required for the RADIUS server function.

RADIUS Server Address	0.0.0.0
RADIUS Server Port	1812
RADIUS Shared Secret	
RADIUS Retries	3
RADIUS Timeout	10

To disable RADIUS login, set address to 0.0.0.0 or retries to 0

Figure 41: RADIUS administration

The following individual items of information can be entered:

- RADIUS Server Address
- RADIUS Server Port
- RADIUS Shared Secret
- RADIUS Server Retries
- RADIUS Server Timeout

**NOTE:** Users that are configurated on the device will be deactivated when a RADIUS server is configurated!

*The RADIUS server must be configurated. Users with service type "Administrative" are administrators of the device.* 

When the checkbox "Enable Radius Login" is clicked, the RADIUS function is activated, if the RADIUS Server is accessible. If this is not the case,, the RADIUS function remains inactive and the following message appears: "RADIUS logins have not been enabled because the connection check failed".

You can create a white list for all incoming IP data in a further table. In this case, only IP data will be processed which come from a source entered in the white list.

		Ado	iress			Net	mask	
IP Whitelist 1	0	. 0	. 0	. 0	0	. 0	. 0	. 0
IP Whitelist 2	0	. 0	. 0	. 0	0	. 0	. 0	. 0
IP Whitelist 3	0	. 0	. 0	. 0	0	. 0	. 0	. 0
IP Whitelist 4	0	. 0	. 0	. 0	0	. 0	. 0	. 0

Figure 42: White list administration

The following parameters can be specified for four IP sources respectively:

- IP address
  - ) Netmask



# "TS Analyzer" menu

The U 118 resp. U 118-X can be equipped with a Transport Stream Analyzer by purchasing a licence. This Analyzer displays the structure of the MPEG2 TS, from the tables to the individual PID and its service. Click on the "TS Analyzer" submenu to access the selection of the transport stream for analysis. The following input mask now appears:

#### TS Analyzer

Alias	Baye rn 1 ARD BR	tage ssch au24 ARD	DATA SYST EM TR 78 MTV Netw orks Euro pe	TELE MELO DY CSAT	ZDF ZDFv isio n	Das Erst e ARD	WDR Biel efel d ARD	SAT. 1 ProS iebe nSat .1	DATA SYST EM TR 78 MTV Netw orks Euro pe	ORF1 ORF	Baye risc hes FS Süd ARD	WDR Köln ARD	CNN Int. CNN		Juwe lo pur MEDI A BROA DCAS T		ASTRO
TSID ONID	1093 1	1051 1	1078 1	1024 1	1079 1	1101 1	1201 1	1107 1	1078 1	1117 1	3101 1	2101 1	8707 8468	0 0	1113 1	0	65535 65535
Sou rce	<u>IP</u> RX1	<u>IP</u> <u>RX2</u>	<u>IP</u> RX3	<u>IP</u> <u>RX4</u>	<u>IP</u> <u>RX5</u>	IP RX6	<u>IP</u> <u>RX7</u>	IP RX8	<u>IP</u> RX9	<u>IP</u> RX10	<u>IP</u> <u>RX11</u>	<u>IP</u> RX12	<u>IP</u> <u>RX13</u>	<u>IP</u> <u>RX14</u>	<u>IP</u> RX15	<u>IP</u> RX16	<u>Test</u> <u>Gen.</u>
Ana Iyze	۲	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	•
Stand	Standard Table																
MPE	MPEG PAT					CA	CAT TSDT				PMTs						
	VIIT actual						other	(only fi	rst four	a) 🔽 s	DT act	tual			T other	(only fi	rst found

🗆 тот Please be patient until measurements are finished. (e.g. EIT may take a long time.)

EIT actual present/following EIT actual schedule

Submit Reset Form

🗹 TDT

DVB

Figure 43: Transport stream analyzer

To analyse a transport stream, click on the corresponding radio button in the "Analyze" line and then click on the "Submit" button. If you wish to reset your inputs, click on the "Reset" button.

BAT (only first found) RST (only first found)

**NOTE:** The two buttons "Submit" and "Reset" are only visible when this module has been licensed. If this is not the case, the link "No licence" will appear instead. Click on this, or the item "Licence" in the menu at the left to access the "Licensing" input mask (more detailed explanation of this is found in the section "Licensing").





# "Licensing" menu

A number of functions of the U 118 resp. U 118-X (e.g. the TS Analyzer) can only be used after being enabled by means of a licence key.

The licence key with the respective function can be purchased from ASTRO. You will receive a licence key with which you can activate the functions using the web browser interface. The format of the licence key is a text document (e.g. Lic001772000222.txt).

To activate the functions, start by clicking on the "Licensing" item in the menu at the left. The following input mask now appears:

#### Licensing

This device has the HWID 00: 17:72:02:00:d0 and you have already licensed: 4 IP TX 4 IP RX 4 IP RX Submit Reset

The software included in this product contains copyrighted software that is licensed under the GPLv3. A copy of that license is included in this device on page gol bit from us for a period of three years after our last shipment of this product and/or spare parts therefor, which will be no earlier than 2015-08-01, via email to kontak@a ASTRO Strobel Kommunikationssysteme GmbH

Figure 44: Enabling licences using the licence key

Now enter the licence key sent to you in the input field. The key or keys can be entered in the input mask using "Copy & Paste". Then click on the "Submit" button to transmit the text to the device. If the licence is valid, this is confirmed with the message "License is valid". An error message is displayed for an invalid licence.

To order additional licences, the MAC address of the device must be specified.

You will find the MAC address on the web browser interface in the "Licensing" submenu (HWID). After the MAC address has been submitted, the licence keys are generated by ASTRO are sent by e-mail or on a CD.





# "Update/config." menu

The menu item "Update/config." allows you to update the firmware version of your device and upload and download a variety of configuration data.

### Firmware update from a local memory location

You will require an update archive for updating the device firmware. This can be downloaded from the ASTRO firmware server (address: "http://astro-firmware.de/Headend-Firmware/u1xx"). The file name of the archive required ends in ".up". The name is comprised of the type designation of the device (U 118 resp. U 118-X) and a four-digit version number.

Once the update archive has been downloaded, start by selecting the item "Update/Config." in the menu of the user interface. The "Software update" table then appears in the content area at the top.

### Software Update

Property	Value					
File	Durchsuchen	Keine Datei ausgewählt.	Update and reboot			
Software archive u168xxxx.up						

*Figure 45: Firmware update* 

Now click on the "Search" button and select the path to the memory location of the update archive downloaded beforehand.

Then click on the "Update and Reboot" button to start the update process. Please wait for the process to be completed, and for the device to reboot.

### **Available Update Archives**

The table tabelle "Available Update Archives" shows an overview update-archives already stored in the module (up to ten). Users can have access to older software versions (Installation or deleting).

#### **Available Update Archives**

Filename	Size	Version	Install	Delete
U1165294.UP	7.64 MiB	5294	install	delete
U1165325.UP	7.86 MiB	5325	install	delete
U1165341.UP	7.92 MiB	5341	install	delete

Bild 46: Firmware Update

## Uploading and downloading configuration files

### Config files (download/upload)

Property	Value						
File	Durchsuchen Keine Datei ausgewählt.	Upload					
System settings	settings.xml						

*Figure 47: Loading/saving configuration files* 

Configuration files can be uploaded and downloaded. To upload files, use the "Search" button to select the preferred file. Then click on the "Upload" button to start the uploading process. The following files are available for download:

System settings (XML format)

Simply click on the corresponding file link to download the file.



## **Downloading configuration/status files**

## Config/status files (read only)

Property	Value
Module info	<u>module.xml</u>
IP configuration	<u>ip.xml</u>
System status	<u>status.xml</u>
System measurements	measure.xml

Figure 48: Loading status files

The following files are available for download:

Module info (XML format)

□ IP configuration (XML format)

System status (XML format)

System measurements (XML format)

Simply click on the corresponding file link to download the file.

## Loading/saving firmware and configurations using (T)FTP

You can update firmware using a (T)FTP server using the table "Firmware update and configuration via server" and load or save configuration files.

#### Firmware update and configuration via server

Property	Value
(T)FTP Server address	astro-firmware.de
Protocol	⊙ FTP ○ TFTP
FTP Username (e.g. anonymous)	anonymous
FTP Password (e.g. guest)	•••••
Path	/Headend-Firmware/u1xx/
Version	
Mode	Please select 💌

Figure 49: Loading/saving firmware updates and configurations using (T)FTP

To carry out the preferred action, start by selecting an action from the drop-down menu in the "Mode" line. The action can only be carried out when the server path specified does actually exist. Furthermore, any firewalls that have been installed must be configured in a way that allows (T)FTP communication.



The following individual actions are available for selection:

- "Load config from server" action: A configuration stored on the (T)FTP server is transmitted to the U 118 resp. U 118-X and can be activated immediately. The IP settings for the data and management interfaces on the device are not changed. The file "settings.xml" are written onto the U 118 resp. U 118-X.
- **Save config to server**" action: The current configuration of the U 118 resp. U 118-X is written to the (T)FTP server. The configuration includes the following files:
  - "ip.xml" (IP settings for the data and management interfaces)
  - "settings.xml" (all other settings, e.g. IP receiver and modulator settings)
  - "user.xml" (user data)
- "Update firmware from server" action: If you select this action, you must specify the preferred software version under Version (a 4 character maximum applies). One the update is successful, the message "Firmware update OK. Please reboot to use the new firmware version" appears.
- "Load firmware from server" action: If you select this action, you must specify the preferred software version under Version (a 4 character maximum applies). The software selected is written to the SD memory card, but will not be unpacked.
- "Unpack \*.up archive" action: If you select this action, the update archive is unpacked and saved to the SD memory card (specify the version number).
- "Update firmware from SD card" action: If you select this action, the update archive is unpacked, saved to an SD memory card and programmed into the module (enter the version number).
- Overwrite backup firmware" action: The device software is saved in two partitions. The software saved in the first partition is used for operating the module, while the second partition is used to keep a backup copy ready for the event that the update process fails. As long as both partitions are different, the information "Backup differs" will be displayed in the menu "Active Alarm Table". The current software is copied to the backup partition when this action is carried out.

Once you have selected an action, you can add any information still missing from the remaining lines of the table:

- (T)FTP Server address: Address of the server
- Protocol: Activate the radio button "FTP" if you wish to use the more comprehensive FTP protocol. Activate the radio button "TFTP" if you wish to use the more basic TFTP protocol.
- FTP User name: This depends on the settings for the FTP server used (for astro-firmware.de e.g. "anonymous").
- FTP Password: This depends on the settings for the FTP server used (for astro-firmware.de e.g. "astro").
- Path: Path to the location where data are saved, or from where the data can be loaded. The path must be specified in relation to the root directory of the FTP server, and must always begin with a "/" and end with a "/" as well (enter without quotation marks).
- Version: Enter the version number of the software which you wish to download or save here.

**NOTE:** If the update is carried out using the TFTP protocol, then filling in the input fields "FTP User name" and "FTP Password" is not necessary.



# "System Log" menu

To have the system log displayed, click on "System log" in the menu at the left. The following overview will now appear:

					Local logfile			
Log file fille	r a	Emergency, 4 Ale	rt. 🗷 Critical. 🗵 Er	tor. × Warn	ing. 4 Notice, 4 info. 4 D	esug		
Debug log I	Sie 🔅	on = off						
Delete log f	ties after 9	days						
					Syslog			
Syslog serv	er a	60.0	0.000		0000	0.000	0.000	0000
Syslog Mer	r (4	Emergency, 4 Ale	rt. K Critical. K Er	tor: WWarn	ng. 4 Notice. 4 Info. D	eoug		
					SNMP traps			
SNMP trap	receiver 0	000	0.000		0000	0000	0000	0000
SNMP trap	community p	ublic						
SNMP trap	filter 2	Emergency, 4 Ale	rt. 🗹 Ontical, 🖉 E)	ror, 🖉 Warn	ing & Notice, Sinto, D	ecug		
					SNMP agent			
SHMP acce	55	no • no						
SNMP GET	SET community	ublic	1			1	1	1
	THE R LOAD	Dane Mint	e Read	Write	Read Write	Deard Mete	Read Write	Read Write
Access pen	THESONAL P	The second and the second seco				C HEAD _ HTTMC	C THE ST THINK	
SNMP auth	entication failure trap	on e off				C HOM CITHIN		
Access pen SNMP auth Enforce cor	entcation failure trap	on + off				C PERC CAPITAL		
Access pen SNMP auth Enforce cor Note: Use 4 Note: To en Submit	entication failure trap mmunity policy empty fields for unusin force community poli Reset Form	on e off	es or communitie			- PARK - PPER		
Access peri SIMP auth Enforce cor Note: Use 4 Note: To er Submit SNMP MIB	entication failure trap entration failure trap empty policy 7 empty fields for unusu nforce community poli Reset Form.	on * off	es or communiti	*		Paulo Princ		
Access per SNMP auth Enforce cor Note: Use o Note: To er Submit SNMP MIB pstro mit	entration failure trap a mmunity policy 7 empty fields for unusu force community poli Reset Form bs	on > off	ies or community	H		Palled _ pros		
Access per SNMP authors Enforce cor Note: Use of Note: To er Submit SNMP MIB astro mb English man Serman ma	resolution failure trap of memory fields for unuser for one memory fields for unuser form (free community policity) (free community) (	on + off	ies or communiti	**				
Access per SIMP auth Enforce cor Note: Use e Note: To er Submit SNMP MIB astro mb English man German ma System Log	empty fields for unusuantip policy  empty fields for unusuantip policy Reset Form Reset Form bs use ut66mane.pdf g	ed SNMP address	ies or community					
Access per SNIP auth Enforce cor Note: Use of Note: Use of Submit Submit SNMP MIB astro.mip English man System Los Retesh	employ a series of the series	on + off	ies or communiti					
Access per SHAP auth Enforce cor Note: Use of Note: To er Submit SNMP MIB astro mb English man German ma System Lor Refush System Iog Debug log a Jse right cli	menune menung and an	ed SNMP address cy login as admir g on refresh	ies or communiti	•				
Access per StillP auth Enforce cor Note: Use of Submit SNMP MilB astro mib English man Demian ma System Lop Retesh System Lop Debug log Jse right cli Number	menorementation failure trap a memory policy 2 memory holds for unpus trades for unpus trades community policy 2 memory holds for unpus trades for the second secon	d SNMP address cy login as admin g on refresh coally.	les or community	55 54/18/12				
Access peri SNMP auth Enforce cor Note: Use Note: To er Submit SNMP MIB astro mib English man Derman ma System Lor Rehesh bystem log Debug log a Jse right cli number	meneration faure hop memory books of unany empty fields for unany fields for unany fields for unany fields for unany fields for unany fields for unany fields for the field for must utility any field for the field for field for the field for field for	n + off d SNAP address cy login as admin g on refresh localy uptions Out On 52m (Dis-	user source	es sevent notice	mettage Fan good (600)			

Figure 50: System log

You can check or configure the following parameters individually:

### System log settings

#### System Log Settings

			Local logfile			
Log file filter	Emergency, 🗹 Alert,	🗹 Critical, 🗹 Error, 🗹 Warr	ning, 🗹 Notice, 🗹 Info, 🔽 D	Debug		
Debug log file	on off					
Delete log files after	90 days					
			Syslog			
Syslog server	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0
Syslog filter	Emergency, Alert,	🗹 Critical, 🗹 Error, 🗹 War	ning, 🗹 Notice, 🗹 Info, 🗖 D	Debug		
			SNMP traps			
SNMP trap receiver	0.0.0.0	0.0.00	0.0.0.0	0.0.0.0	0.0.0.0	0.0.0.0
SNMP trap community	public					
SNMP trap filter	Emergency, Alert,	🗹 Critical, 🗹 Error, 🔽 Warr	ning, 🗹 Notice, 🗖 Info, 🗖 🗖	Debug		
			SNMP agent			
SNMP access	⊙ on ⊚ off					
SNMP GET/SET community	public				1	
Access permission	Read 🔲 Write	Read Write	Read Write	Read Write	Read Write	Read Write
SNMP authentication failure tra	ap 🔾 on 🔍 off					
Enforce community policy	V					

Submit Reset Form

Figure 51: Filter settings for the system log display

You can activate or deactivate filters for displaying the log entries here. To have messages from the corresponding category displayed, activate the checkbox allocated to the category.

**NOTE:** You can connect to higher-level management systems using the "Syslog" and "SNMP" parameters.



### Management Information Base (MIB)

The NSMP MIBs available are stored on the device and can be downloaded by using the download link below the table "System Log Settings".

## System log

### System Log

Refresh Check box to clear log on refresh 🗌

System log in CSV format: <u>log.csv</u> Debug log in CSV format: <u>debug.csv</u> Use right click and "save as" to save locally.

number	time	uptime	user	source	severity	message
1	01 Jan 1970 00:14:05 UTC	0d 00h 14m 05s	user	192.168.1.26	info	Login
2	01 Jan 1970 00:14:00 UTC	0d 00h 14m 00s	admin	192.168.1.26	info	Logout
3	01 Jan 1970 00:12:41 UTC	0d 00h 12m 41s	admin	192.168.1.26	info	Login
4	01 Jan 1970 00:10:19 UTC	0d 00h 10m 19s	system	local	info	Login timeout
5	01 Jan 1970 00:01:41 UTC	0d 00h 01m 41s	admin	192.168.1.26	info	Login
6	01 Jan 1970 00:01:31 UTC	0d 00h 01m 31s	system	local	warning	Time is not synced
7	01 Jan 1970 00:00:32 UTC	0d 00h 00m 32s	system	local	critical	Fan fail (0)
8	01 Jan 1970 00:00:26 UTC	0d 00h 00m 26s	boot	local	info	Ready
9	01 Jan 1970 00:00:26 UTC	0d 00h 00m 26s	system	local	warning	Backup firmware differs!

Figure 52: Logfiles

Click on the "Refresh" button to update the system log display. The entries in the system log are sorted chronologically according to the time at which the event occurred.

If you do not wish for the existing entries to be displayed after a refresh, activate the checkbox "Checkbox to clear log on refresh". Once the checkbox has been activated, after a refresh, the process of deleting the old log entries is listed as the first entry (specified the user account and the current time upon deletion).

You can also download the following logfiles:

System log (CSV format)

Debug log (CSV format)

### **Downloading log files**

### Download Log Files



Figure 53: Downloading log files

A maximum of 2,500 lines is displayed in the "Log files" table. The complete log file can be downloaded from the "Download Log Files" table by clicking on the file name XX.csv.



# "Alarm severities" menu

You can change the alarm settings for diverse parameters or deactivate the alarm display for a parameter, when preferred. To do so, click on the item "Alarm Severities" in the menu at the left. A set of tables for different parameter groups then appears:

Code	Message	emergency	alert	critical	error	warning	notice	info	debug	of
0x1000002	Temp 1 fail (%.1f)	0	0	۹	0	0	0	0	0	0
0x1000002	Temp 1 good (%.1f)	0	0	0	0	0	۲	0	0	0
0x1000003	Temp 2 fail (%.1f)	0	0	۲	0	0	0	0	0	0
0x1000003	Temp 2 good (%.1f)	0	0	0	0	0	۹	0	0	0
0x1000004	Temp 3 fail (%.1f)	0	0	۲	0	0	0	0	0	0
0x1000004	Temp 3 good (%.1f)	0	0	0	0	0	۲	0	0	0
0x1000005	Temp 4 fail (%.1f)	0	0	۲	0	0	0	0	0	0
0x1000005	Temp 4 good (%.1f)	0	0	0	0	0	۹	0	0	0
0x1000006	Fan fail (0)	0	0	۲	0	0	0	0	0	0
0x1000006	Fan good (%.0f)	0	0	0	0	0	۹	0	0	0
0x1000007	Supp 1.2 fail (%.2f)	0	0	۲	0	0	0	0	0	0
0x1000007	Supp 1.2 good (%.2f)	0	0	0	0	0	۹	0	0	0
0x1000008	Supp 1.5 fail (%.2f)	0	0	۲	0	0	0	0	0	0
0x1000008	Supp 1.5 good (%.2f)	0	0	0	0	0	۲	0	0	0
0x1000009	Supp 1.8 fail (%.2f)	0	0	۲	0	0	0	0	0	0
0x1000009	Supp 1.8 good (%.2f)	0	0	0	0	0	۲	0	0	0
0x100000a	Supp 2.5 fail (%.2f)	0	0	۲	0	0	0	0	0	0
0x100000a	Supp 2.5 good (%.2f)	0	0	0	0	0	۹	0	0	0
0x100000b	Supp 3.3 fail (%.2f)	0	0	۲	0	0	0	0	0	0
0x100000b	Supp 3.3 good (%.2f)	0	0	0	0	0	۲	0	0	0
0x1000010	Supp 5.2 fail (%.2f)	0	0	۲	0	0	0	0	0	0

### Status of power supply, temperature, fan

Figure 54: Alarm Severities

The preset options for the alarm messages are identified by a green frame. Retaining these settings is recommended.



# "Active alarms" menu

To have the "Active Alarm" table displayed, click on the corresponding item in the menu at the left. The following table now appears:

## Active Alarm Table

number time uptime user source severity message TSID SID alias

ASTRO Strobel Kommunikationssysteme GmbH

Figure 55: Active alarm table

The table provides information about error messages currently active. The "Message" column shows the error message in plain text.

**NOTE:** You can also access the "Active Alarm Table" by clicking the red point in the status line in the upper section of the user interface.

# "Statistics" menu

To have data transmission statistics for the U 118 resp. U 118-X displayed, click on the "Statistics" item in the menu at the left. All statistics relevant to the operation of the device and which can be used for analysis are displayed here. The following individual tables are displayed:

### Ethernet bandwidth

Ethernet bandwidth

Property	Management A (eth0) 1G full	Management B (eth1) 1G full	Data A (eth2) 1G full	Data B (eth3) 1G full
Transmit	0.8 Mbit/s	0.0 Mbit/s	76.6 Mbit/s	76.6 Mbit/s
Receive	0.0 Mbit/s	0.0 Mbit/s	71.0 Mbit/s	70.9 Mbit/s

Figure 56: Ethernet bandwidth

The transmission rates for sending (transmit) and reception (receive) are specified for the respective interfaces Management A, Management B, Data A and Data B.

### **Ethernet frames**

Property	Data A (eth2) 1G	Data B (eth3) 1G
Total frames sent by host	19	19
Total frames sent to host	284	272
Total exception frames sent to host	87	0
Total errored frames received	0	0
Total frames discarded by deencapsulator	108776	130563
Total frames discarded because of lack of buffers	0	0
Total transmit frames generated from IP TX 1 / per sec.	2792023 / 3214	2792023 / 3214
Total transmit frames generated from IP TX 2 / per sec.	3071235 / 3535	3071235 / 3535
Total transmit frames generated from IP TX 3 / per sec.	91130 / 103	91130 / 103
Total transmit frames generated from IP TX 4 / per sec.	91130 / 103	91130 / 103
Total receive frames forwarded to IP RX 1 / per sec.	2814153 / 3214 2814152 / 3214 0 / 0	2814150/3214 2814149/3214 0/0

Figure 57: Ethernet frames

The following parameters are displayed for the interfaces Data A and Data B, in this order:

- The number of IP frames transmitted to the processor is specified in the first three lines of the table.
- Number of defective frames.
- Number of frames which could not be allocated.
- Number of frames which could not be allocated due to exceeding the total buffer depth.
- The number of frames transmitted per transport stream in total or per second is displayed in lines 7 to 10 for each IP transmitter.
- The number of frames forwarded to the IP receiver (primary, secondary and tertiary respectively) are displayed in the last line.



### Ethernet RX

Channel	Encap	TS Rate	Buffer depth	FEC	Valid	Missing	Fixed	Duplicate	Reordered	Out of range
IP RX1	1328 bytes 7 packets RTP/UDP/IP	33.8 Mbit/s Mult. PCR	0 Frames 0.0 % 0.0 ms	none	2744031	0	0	0	0	0

Refresh Check box to clear statistics on refresh 🗌

Figure 58: Ethernet RX

The following parameters are displayed for the individual IP receivers:

- Encap: The number of bytes in the IP payload for each frame is specified in the upper line; below this, the number of TS packets per frame is displayed. The lower line specifies whether the transmission occurs by UDP / IP or TRP / UDP / IP. The transmission protocol is selected under the menu item "IP RX" in the table line "Encapsulation".
- TS Rate: The net data rate is specified in the upper line; the lower line displays whether the transport stream includes one, or a multiple, PCR. This setting can be made under the menu item "IP RX" in the table "Channel settings", line "Bit rate".
- Buffer depth: The absolute buffer depth is displayed in the upper line (number of frames); below this, the relative buffer depth (in %) is displayed. The buffer depth is displayed in relation to the transport stream rate in the third line.
- FEC: If an RTP data stream is being used, the FEC configuration detected is displayed here. Prerequisite for this is that FEC has been activated in the "IP RX" menu (radio button "ON").
- Valid: Total number of valid IP frames.
- Missing: Total number of IP frames not received (is only measured when RTP is used).
- Fixed: When Forward Error Correction (FEC) is activated, missing or defective frames can be restored. The number of frames which were restored is displayed.
- Duplicate: The number of IP frames received several times (is only displayed when RTP is used).
- Reordered: The number of IP frames arriving in the wrong order, but which were able to be switched back due to a sufficient buffer depth (is only displayed when RTP is used).
- Out of range: The number of IP frames arriving in the wrong order and which could not be switched back due to an insufficient buffer depth.



# "Network" menu

To have the network settings displayed, click on "Network" in the menu at the left. The following overview will now appear:

Interface statistics								
Interface			Statist	ics				
	IPv4	: 172.25.0.150, Bro	adcast 172.25	.255.2	55, Netmas	k 255.255.	0.0	
eth3	UP E	BROADCAST RUNN	ING MULTICAS	т мти	1500, Met	ric: O		
	Rx -	Packets: 0, Bytes:	0, Tx - Packets:	0, Byt	es: O			
	IPv4	: 172.24.0.150, Bro	adcast 172.24	.255.2	55, Netmas	k 255.255.	0.0	
eth2	UP E	BROADCAST RUNN	ING MULTICAS	т мти	: 1500, Met	ric: O		
	Rx -	Packets: 0, Bytes:	0, Tx - Packets:	0, Byt	es: O			
	IPv4	: 192.168.5.150, B	roadcast: 192.1	68.5.2	55, Netmas	k 255.255.	255.0	
eth1	UP BROADCAST RUNNING MULTICAST MTU: 1500, Metric: 0							
Rx - Packets: 30, Bytes: 2340, Tx - Packets: 0, Bytes: 0								
	IPv4	: 192.168.1.150, B	roadcast: 192.1	68.1.2	55, Netmas	k 255.255.	255.0	
ethO	UP E	JP BROADCAST RUNNING MULTICAST MTU: 1500, Metric: 0						
	Rx -	Packets: 3414, By	es: 314554, Tx	- Pack	ets: 3674, I	Bytes: 3042	143	
	IPv4	: 127.0.0.1, Broadd	ast: 127.0.0.1,	Netma	sk: 255.0.0	.0		
100	UP L	_OOPBACK RUNNI	NG MULTICAST	MTU:	16384, Met	ric: O		
	Rx -	Packets: 387, Byte	s: 32207, Tx - F	Packets	: 387, Byte	s: 32207		
Routing ta	able	s						
Destinat	ion	Gateway	Mask	Flags	Interface	Genmask		
0.0.0		192.168.1.100	0.0.0.0	UG	eth0			
127.0.0.0		127.0.0.1	255.0.0.0	UG	100			

Figure 59: Network settings

The detailed interface statistic properties which are displayed are for information purposes only, and are used to describe the network. They could be useful for customer service in the event of a fault.



# "Devices" menu

To have an overview of the local data memory in the device displayed, click on the item "Devices" in the menu at the left. Among other things, the total memory capacity, the capacity of the unused memory, and the files saved are displayed:

Block device: /

****1 ***** C	0.24 -	leeke (	1 6 2 8 2					
free size: 5	7120 bi	locks, a	102 32	1496 bytes	-			
hleek size: 5	100 D	LOCKS,	1000/1	4496 Dyces	5			
DIOCK SIZE. C	195 0	yces						
CHLISTBE, XML	ſmode	00000008	ino	00000002	nlink	1	size	139551
CHLISTDE, XML	[mode	00000008	ino	00000004	nlink	1	size	139691
CHLISTER XML	Imode	0000000	ino	00000006	nlink	1	size	139671
CHLISTRU, XML	Imode	00000008	ino	00000008	nlink	1	size	139201
CHLISTUK XML	Imode	00000008	ino	0000000a	nlink	1	size	139631
FM E.BIN	ſmode	00000008	ino	00000054	nlink	1	size	3599481
FM S.BIN	ſmode	00000008	ino	0000007d	nlink	1	size	9558701
MPEG4.BIN	ſmode	00000008	ino	000002a3	nlink	1	size	15616161
U1144172.UP	[mode	00000008	ino	000003b4	nlink	1	size	47513641
U1154172.UP	[mode	00000008	ino 3	000005fa	nlink	1	size	4679684]
U1244172.UP	[mode	00000008	ino 8	00000837	nlink	1	size	3768324]
MAN E.BIN	[mode	00000008	ino 3	00000c91	nlink	1	size	1802492]
IP.XML	[mode	00000008	ino 8	00000a05	nlink	1	size	758]
USER.XML	[mode	00000008	ino 3	00000a06	nlink	1	size	427]
SETTINGS.XML	[mode	00000008	ino 8	0000000c	nlink	1	size	26117]
MEASURE . XML	[mode	00000008	ino 8	00000a0a	nlink	1	size	2261]
CHLIST.XML	[mode	00000008	ino 8	00000a0b	nlink	1	size	13969]
MAN S.BIN	[mode	00000008	ino 8	00000d4f	nlink	1	size	611296]
DAT S.BIN	[mode	00000008	ino 3	00000d92	nlink	1	size	655912]
PAL S.BIN	[mode	00000008	ino 8	00000de1	nlink	1	size	578295]
MPEG.BIN	[mode	00000008	ino 8	00000e28	nlink	1	size	1595996]
ASTRO.MIB	[mode	00000008	ino 8	00000eeb	nlink	1	size	806]
U114.MIB	[mode	00000008	ino 8	00000eec	nlink	1	size	25676]
UPDATE.LOG	[mode	00000008	ino 8	00000c72	nlink	1	size	1736]
ANALYZER.LOG	[mode	00000008	ino 8	00000ef0	nlink	1	size	121538]
U114MANE.PDF	[mode	00000008	3 ino	0000165a	nlink	1	size	2561759]
U114MANG.PDF	[mode	00000008	ino 8	00001794	nlink	1	size	4153326]
STILL4.JPG	[mode	00000008	ino 8	00000a09	nlink	1	size	37970]
020105_0.CSV	[mode	00000008	ino 8	000014bb	nlink	1	size	37762]
U124.MIB	[mode	00000008	ino 8	000018fa	nlink	1	size	25337]
ERROR1.JPG	[mode	00000008	ino 8	00002bdd	nlink	1	size	126919]
ERROR2.JPG	[mode	00000008	ino 8	00004324	nlink	1	size	72307]
ERROR3.JPG	[mode	00000008	ino 8	0000432d	nlink	1	size	119980]
ERROR4.JPG	[mode	00000008	ino 8	0000433c	nlink	1	size	183334]
CHLISTUS.XML	[mode	00000008	3 ino	00000c7a	nlink	1	size	14551]
U115MANE.PDF	[mode	00000008	ino 3	0000481Ъ	nlink	1	size	5305763]
U115MANG.PDF	[mode	00000008	3 ino	00004aa3	nlink	1	size	5276753]
U124MANE.PDF	[mode	00000008	ino 3	00004d28	nlink	1	size	4498595]
U124MANG.PDF	[mode	00000008	ino 8	00004f4e	nlink	1	size	4050414]

Figure 60: List of the local data memories (part 1)

Block device: /conf

total size: 983 free size: 859 block size:	3040 b 300 b 1 b	locks, locks, ytes	983 859	3040 byte: 3300 byte:	3			
	[mode	016f0001	ino	00000001	nlink	1	size	0]
	[mode	016£0001	ino	00000001	nlink	1	size	0]
ip.xml	[mode	016f0008	ino	00000002	nlink	1	size	758]
user.xml	[mode	016f0008	ino	00000003	nlink	1	size	427]
measure.xml	[mode	016f0008	ino	00000005	nlink	1	size	2261]
chlist.xml	[mode	016f0008	ino	00000006	nlink	1	size	13969]
settings.xml	[mode	016£0008	ino	0000002a	nlink	1	size	26117]

Block device: /ramdisk

128 blocks, 126 blocks, 512 bytes

total size: free size: block size:

> . [mode 01ff0001 ino 08564ba4 nlink 2 size 64] .. [mode 01ff0001 ino 08564ba4 nlink 2 size 64]

65536 bytes 64512 bytes

*Figure 61: List of the local data memories (part 2)* 



	Tues de la chiere
	Iroubleshooting
	If the device is not functioning correctly, please perform the following checks:
	Check whether the device is connected to the required grid voltage (230 V~, 50 Hz for the U 100 base unit, and 48 V for the U 100-48 base unit).
	Check whether the signal cable is connected correctly, and that there are no breaks or short circuits in the connectors.
	If the problem cannot be resolved, please contact the ASTRO customer service.
1	Maintenance and repair
	The device must not be opened other than for repair purposes. Repairs may only be carried out at the factory or at workshops, or by persons, authorised by ASTRO Strobel GmbH. Read carefully: EN 60728-11 Safety requirements: No service work during thunderstorms.
	<b>NOTE:</b> In the event of repairs, <b>DIN VDE regulations 0701 - 0702</b> , where applicable, must be adhered to, and these are secondary to the relevant data specifications in DIN EN 60950-1. You must disconnect the power plug before opening the base unit!
1	Service tasks
	The following tasks, which involve the removal of screw connections, can be performed by appropri- ately instructed service personnel: Removal and installation of signal converters (e.g. U 118 resp. U 118-X) and power modules, even when the U 100 is operating.
	Replacing power modules
	After removing the screws from the cover of the power module chamber (ASTRO logo), the power modules can be pulled forwards by hand using the mounting tab. When installing power modules, do not touch the fan or fan grille and only use the mounting tab affixed to the power module. When the tasks are complete, the cover of the power module chamber must be replaced. Continuous operation of the device is not permitted without this cover.
	<b>ATTENTION:</b> Never reach into the power module division of the U 100-230 base unit, or insert objects into it.
	<b>NOTE:</b> The U 100-230 base unit must only be operated with the original power module(s)!
	Replacing converter modules
	Converter modules can be pulled out to the front after removing the safety screw in the front covers (see section "Connecting and installing the module")



# Technical data

Туре		U 118	U 118-x		
Order number		380 122	380 127		
EAN-Code		4026187191955	4026187192815		
Maximum number of IP input signals			8		
Maximum number of PAL output signals			8		
Network interfaces (passive routing to U 1)	x)				
Management		2 x 100 Base-T	Ethernet (RJ 45)		
Data		2 x 1000 Base-	T Ethernet (RJ 45)		
Protocol	-	IEEE802.3 Ethernet, RTP, ARP, IP	v4, TCP/UDP, HTTP, SNTP, IGMPv3		
Transport stream editing					
TS Decapsulation		UDP, UDP / RTF	P, 1-7 packets, FEC		
Packet length	[Bytes]	188	3 / 204		
Decoding					
Video		H.264/AVC Level 4.1 HP, MPEG-2 MP@HL			
Audio	-	MPEG-1/2 Layer 1/2, (HE-)AAC, AC-3* / Dolby Digital (Plus) optional			
Data	-	Teletext, VPS, WSS, Teletext subtitles, DVB Subtitling			
PAL modulator					
Connectors	[Ω]	75, 2	x F-jack		
Frequency range	[MHz]	47 - 862, digital modulation	47 - 862, digital modulation, 2 x 4 channels on 80 MHz bandwidth		
Output level	[dBµV]	112	111		
Return loss	[dB]	2	<u>14</u>		
Spurious frequency dist.	[dB]	2	: 60		
Stereo cross talk	[dB]	>	• 55		
Residual carrier accuracy	[%]		1		
TV standard	_	PAL B/G, D/K, M, N, SECAM, S	ECAM L, A2/NICAM, NTSC mono		
Video-signal to noise ratio	[dB]	typ. 63	typ. 61		
Common data					
Current consumption at 48 V	mA	890	850		
Power consumption at 48 V	W	U 118: 43; U 118 (AC-3): 44	U 118-X: 41; U 118-X (AC-3): 42		
Input voltage	V	36 - 60			
Dimensions		1 HU, 19 inch			
Ambient temperature	°C	0.	+45		

\*) AC-3 only supported by U 118 (AC-3), order number 380 123 and U 118-x (AC-3), order number 380 128



# ASTRO Strobel Kommunikationssysteme GmbH

## © 2016 ASTRO

Subject to change. Change management and copyright: This document contains information protected by copyright. It is prohibited to photocopy, duplicate, translate or store on data storage media this document, either partially or in full, without prior agreement of the ASTRO company. These operating instructions have been written by: ASTRO Strobel Kommunikationssysteme GmbH Olefant 1-3, D-51427 Bergisch Gladbach (Bensberg) Tel.: 02204/405-0, Fax: 02204/405-10 eMail: kontakt@astro.kom.de Internet: www.astro-kom.de All the information contained in this document has been checked in good faith. The ASTRO company cannot be held liable for any damage or injury arising in connection with the use of these operating instructions.