

Operating instructions



ASTRO EdgeFM U124

RF1.1 Channel Settings

Time: 25 Oct 2010 10:51:48 UTC, Up: 0d 02h 36m 47s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
Name: ASTRO EdgeFM U124, Location: Headend City, Contact: kontakt@astro-kom.de

● ASTRO EdgeFM U124

● MgmA 192.168.1.221

● MgmB 192.168.5.221

● user is logged in

Status
Logout
Main
IP RX

IP RX1
IP RX2
IP RX3
IP RX4

RF

RF1.1
RF1.2
RF1.3
RF1.4
RF1.5
RF1.6
RF1.7
RF1.8
RF2.1
RF2.2
RF2.3
RF2.4
RF2.5
RF2.6
RF2.7
RF2.8

User
TS Analyzer
Licensing
Update
System Log
Statistics
Network

user
on 192.168.1.40
is logged in.

Timeout in 1780 s

Service Selection

Service name, Provider name, (SID Type)	
Transport Stream / Service	HIT RADIO FFH, MEDIA BROADCAST (SID:12660 Digital radio)

Submit Reset

Stream Selection

Transport Stream	SID
Service IP_RX3 TSID:1113 ONID:1 Alias K-TV, MEDIA BROADCAST	12660 0 for manual PID selection
ES	PID
PCR	0
Audio	0
RDS	1025

Submit Reset

ASTRO EdgeFM U124

Statistics

Time: 25 Oct 2010 10:51:48 UTC, Up: 0d 02h 36m 47s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
Name: ASTRO EdgeFM U124, Location: Headend City, Contact: kontakt@astro-kom.de

● ASTRO EdgeFM U124

● MgmA 192.168.1.221

● MgmB 192.168.5.221

● user is logged in

Modulation

Property	Status
RF	on - static
Radio Data System	on - off
Programme Service name	dynamic
Programme Identification	dynamic
Programme Type	dynamic

Ethernet bandwidth

Property	Management A (eth0) 1G	Management B (eth2) 1G	Data A (eth2) 1G	Data B (eth3) 1G
Transmit	0.003 Mbps	0.000 Mbps	0.000 Mbps	0.000 Mbps
Receive	0.026 Mbps	0.000 Mbps	439.585 Mbps	439.584 Mbps

Ethernet frames

Property	Data A (eth2) 1G	Data B (eth3) 1G
Total frames sent by host	42	42

Property	Management A (eth0) 1G	Management B (eth2) 1G	Data A (eth2) 1G	Data B (eth3) 1G
Transmit	0.003 Mbps	0.000 Mbps	0.000 Mbps	0.000 Mbps
Receive	0.026 Mbps	0.000 Mbps	439.585 Mbps	439.584 Mbps

U 124 16-programme IP / FM converter
U 100 Base unit

General

Note concerning the U 100-230 base unit:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Caution!

Changes or modifications of the device not expressly approved by ASTRO Strobel Kommunikationssysteme GmbH or any licensed party responsible for compliance will void the user's authority to operate the equipment!

This operating manual was created to provide the relevant instructions for operating the U114. We expressly recommend reading this manual before installing or operating the device.

The ASTRO company confirms the information in this manual to be correct at the time of printing, but it reserves the right to make changes, without prior notice, to the specifications, the operation of the device and the operating manual. The ASTRO company is not responsible for printing errors. The contents of this operating manual are confidential and protected by copyright. This manual may not be reproduced in any form - not even in part - without prior written permission from the ASTRO company.

Pictograms and safety instructions

Pictograms are visual symbols with specific meanings. You will encounter the following pictograms in this installation and operating manual:



Warning about life-endangering situations due to dangerous electrical voltage or non-adherence to this manual.



Warning about various dangers to health, the environment and material.



Recycling: all of our packaging material (cardboard boxes, accompanying papers, plastic film and bags) is completely recyclable.

Used batteries must be disposed of at approved recycling points. Batteries must be completely discharged before being disposed of.



Electronic devices must not be disposed of with household waste, but rather – according to directive 2002/96/EG OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL from 27 January 2003, on waste electrical and electronic equipment – must be properly disposed of. When they are no longer of use, please bring these devices for disposal to one of the public collection points for this purpose.

Copyright notice

Some of the software of this product is third-party software, which was developed under several different licensing conditions. Detailed information concerning the licenses can be found via the Web interface of the device.

The source code of the free parts of the software is distributed on request for an administration fee.

Please contact:



kontakt@astro-strobel.de
ASTRO Strobel Kommunikationssysteme
Olefant 1-3
D-51427 Bergisch Gladbach (Germany)
Tel.: +49 2204 405/-0

All other parts of the software of this product are copyrighted by Astro Strobel Kommunikationssysteme GmbH.

1	Figures	4
2	Introduction	5
	2.1 Description of functions	5
	2.2 Safety instructions	5
	2.3 Assembly instructions	5
	2.4 Potential equalisation / earthing	6
	2.5 Maintenance and repair	6
	2.6 Service tasks	6
	2.7 Technical data for mains supply	6
	2.8 Installing and coding the backplane	7
	2.81 Coding the backplane	7
	2.82 Installing the backplane	8
3	General introduction	9
	3.1 Connecting the U 124 to a PC / laptop	9
	3.2 The Web browser user interface	9
4	Login	10
5	Status	11
6	Setting the IP interfaces, IP management and base device	12
	6.1 Configuration of the IP interfaces	13
	6.2 IP management configuration	13
	6.3 U 100 settings	14
	6.4 Saving and loading a configuration, default and reboot	14
7	Configuration of the IP inputs	15
8	Configuration of the HF outputs	17
9	User administration	20
10	Transport stream (TS) analyzer	21
11	Licencing	22
12	Software update / saving and loading a configuration	23
	12.1 Update using a TFTP server for Windows as an example	24
13	System log	25
14	Statistics	26
15	Network properties	27
16	Logout	28
17	Technical data	29

1 Figures

The figures show the U 124 installed in the U 100 base device.

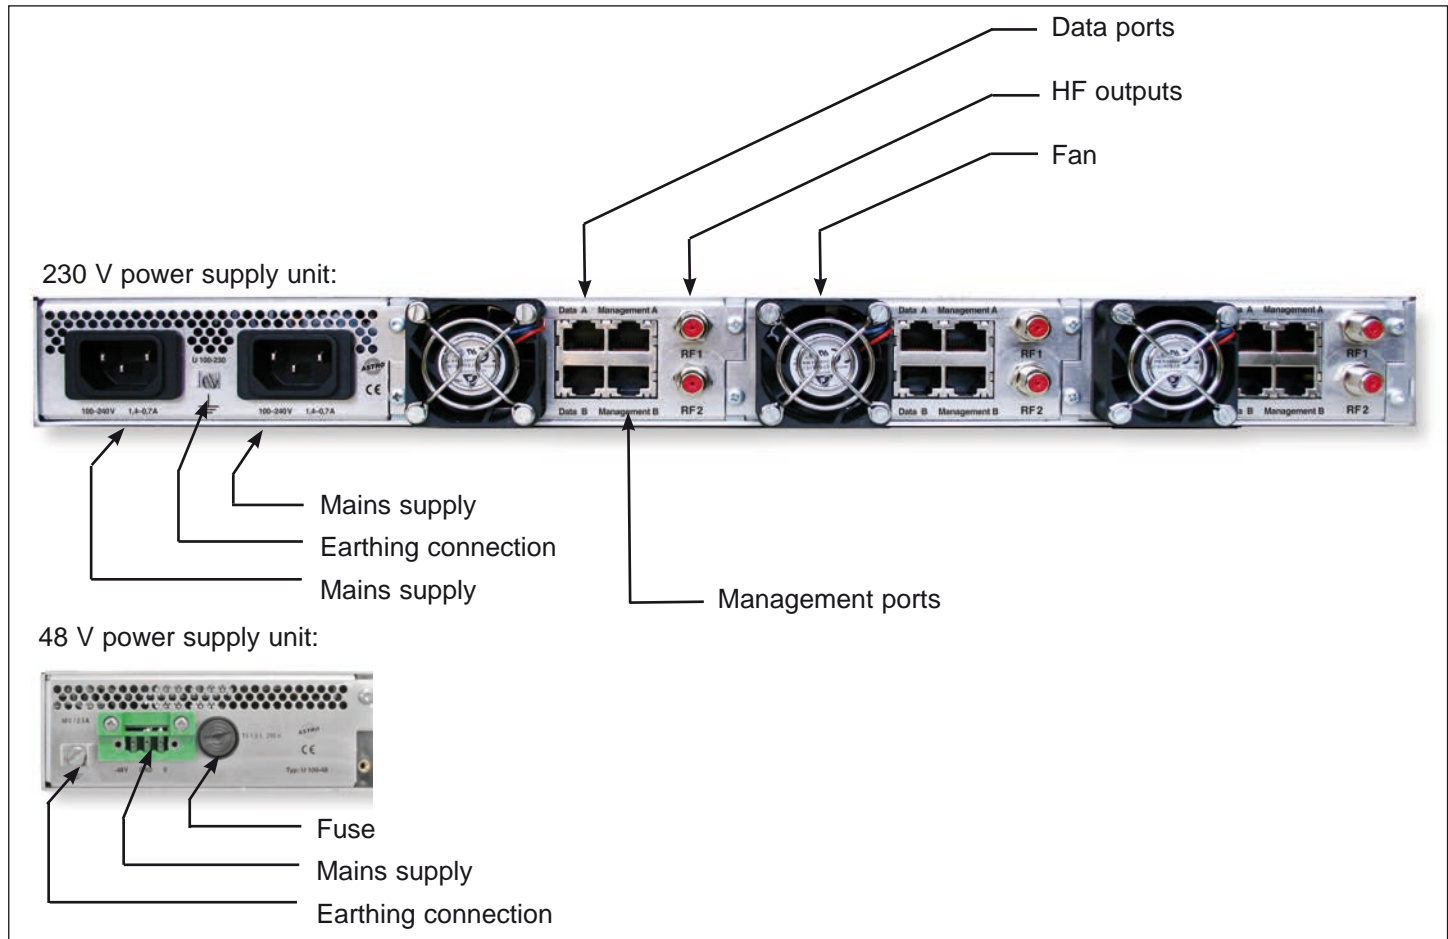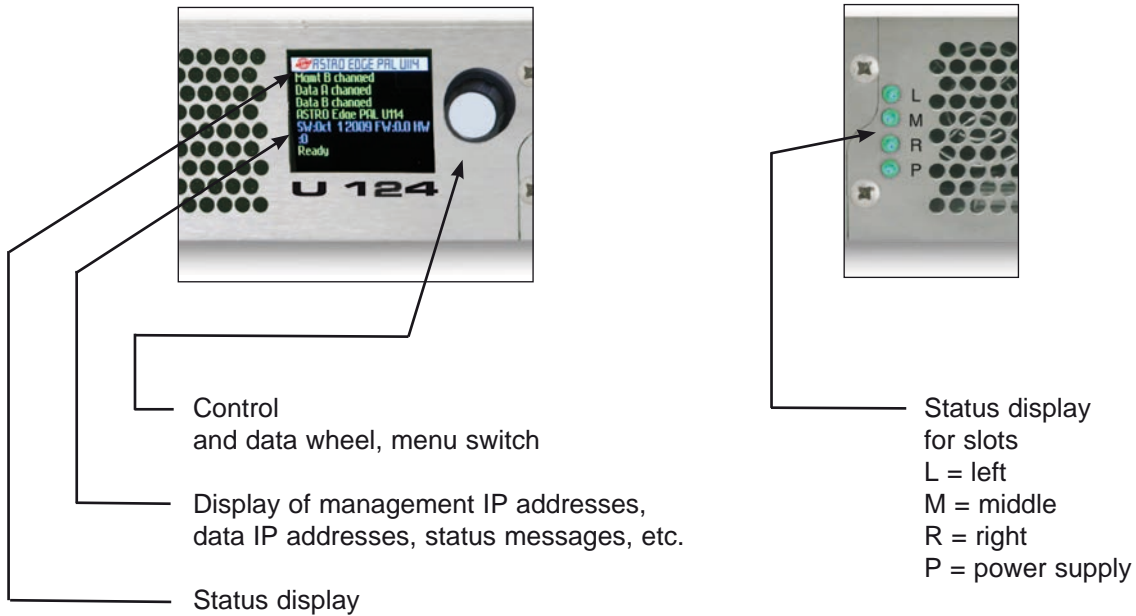

2 Introduction

The instructions in chapter 2 mainly apply to the U 100 - 230 base device.

2.1 Description of functions

The U 100 series is used to convert IP data streams into CATV signals. The U 100-230 base device can accommodate up to three U 1xx signal converters, as well as up to two U 100-SNTs for supplying the voltage to the U 1xx signal converters. The U 124 receives up to four video data streams encapsulated according to the internet protocol (IP) and converts them into up to 16 standardised FM output signals.

2.2 Safety instructions

Disconnect both mains plugs before opening the device!

The device must not be opened - for exceptions, see the maintenance and repair, and the service tasks! Power supply units must not be opened!

The device must be connected to a power supply with an earth contact, and should be positioned close to the mains socket.

The electrical system supplying current to the device, e.g. a house installation, must incorporate safety devices against excessive current, short-circuiting and earth leakages in accordance with EN 60950-1.

Both mains plugs are used to disconnect the device from the mains, therefore they must be easy to access and use at all times. The device is already in operation when one power unit is connected to the operating voltage. When the second power unit is also put into operation, one of the power units runs in idle mode as long as the other unit is supplying power to the device. The device may only be repaired by sending it to ASTRO along with a precise description of the error.

Displays indicate the status of the device operation, as well as the existence of DC voltages separate from the mains that are supplying the components of the device. However, operation displays that are not lit up in no way indicate that the device is completely disconnected from the mains or is voltage-free.

Read carefully:

EN 60 728 – Part 11, Safety requirements / No service tasks during electrical storms!

2.3 Assembly instructions

The U 100 base device may only be mounted using guide rails! If the device is only fastened by means of the screws in the front panel, this will damage the base device!

The outputs of the signal converter must not be operated without connecting a combining network or terminating impedance!

Protection from environmental factors:

The device must only be connected and operated in dry rooms. It must not be exposed to spraying or dripping water, or to similar phenomena. If condensation appears, wait until the device is completely dry. Objects containing liquid must not be placed on top of the device.

The permitted ambient temperature range is 0 ... 45°C (ETS 300 019-1-3 class 3.1).

Mounting environment:

The device is designed for operation in, preferably, metallically conductive 19" racks with sufficient air convection. It should be operated away from heat radiation and other heat sources. The device may only be installed in rooms in which the permitted ambient temperature can be adhered to, even under changing climatic conditions. To avoid trapped heat, it must be freely ventilated on all sides. You absolutely must avoid mounting the device in a niche or covering the ventilation openings.



2.4 Potential equalisation / earthing



The subscriber network must be earthed correctly in accordance with EN 50083-1, and must remain earthed even when the device is removed.
The potential equalisation on the U 100 is effected via the fastening plates of the device, or via the earthing connection on the back of the device. Devices within hand's reached must be incorporated into the potential equalisation among one another.

It is not permitted to operate the device without an earth conductor, device earthing or device potential equalisation!

2.5 Maintenance and repair



Disconnect both mains plugs before opening the device!
The device must not be opened other than for repair purposes. In general, power units must not be opened. Repairs may only be carried out at the plant or at workshops, or by persons, authorised by ASTRO Strobel Kommunikationssysteme GmbH.



Read carefully: DIN VDE 0701- 0702, Repairs

Note: The device must not be opened by the user!

2.6 Service tasks

The following tasks, in which screw connections have to be opened, can be performed by appropriately instructed service personnel: Removal and installation of signal converters (e.g. U 124) and power units, also in the operating mode of the U 100.

Replacing power units

After the screws on the cover of the power unit chamber (ASTRO logo) are removed, the power units can be pulled out by hand, forwards along the mounting panel.
When power units are being installed, there should be no contact with the ventilator or the fan grid, and only the mounting panel attached to the power unit should be used.
When the tasks are complete, the cover of the power unit chamber must be replaced; continuous operation of the device is not permitted without this cover.



Note: Do not put your hand or any objects into the power unit chamber.

The U 100 must only be operated with the original power unit(s)!

Replacing converter modules:

Converter modules can be pulled outwards after the safety screw on the front panel has been unscrewed.

2.7 Technical data for mains supply (U 100 SNT - 230 V version)

Mains voltage:	100 – 240 V
Mains frequency:	50 / 60 Hz
Current consumption:	1.4 – 0.7 A per power unit
Protection class according to EN 60529:	IP 20
Permitted ambient temperature range:	0 ... 45°C
Secondary fuse in U100-230:	T3,15A L 250 V IEC 60127-2/3
Secondary fuses in U 124:	SMD, various values

2.8 Installing and coding the backplane

The scope of delivery of every U 1xx signal converter includes a backplane to create the physical connection between the signal converter and the base device. Both the mains HF connections and the network connections are connected to this backplane. The temperature controlled fan for cooling the U 1xx signal converter is located on the backplane.

2.8.1 Coding the backplane

To correctly define the position of the backplane, and thus the position of the related signal converter in the U 100 base device, the jumper on the board of the backplane, which is described in the following section, must be configured.

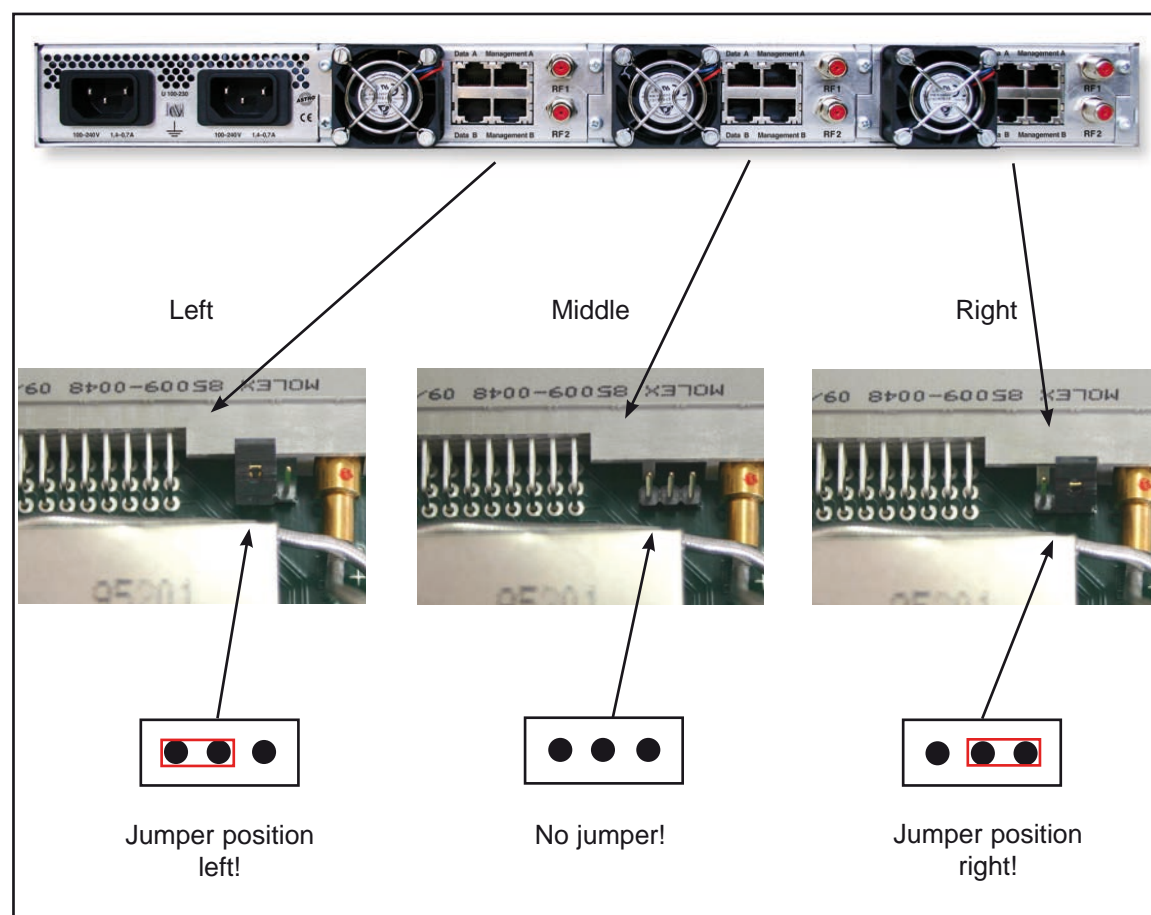


Figure 1: Coding the backplane using the jumper

Note:

An incorrectly configured jumper leads to incorrect displays in the front LEDs. Additionally, it is not possible to display a correct position on the Web user interface!



2.8.2 Installing the backplane

In its state on delivery, the back of the U 100 base device is covered with blind panels:

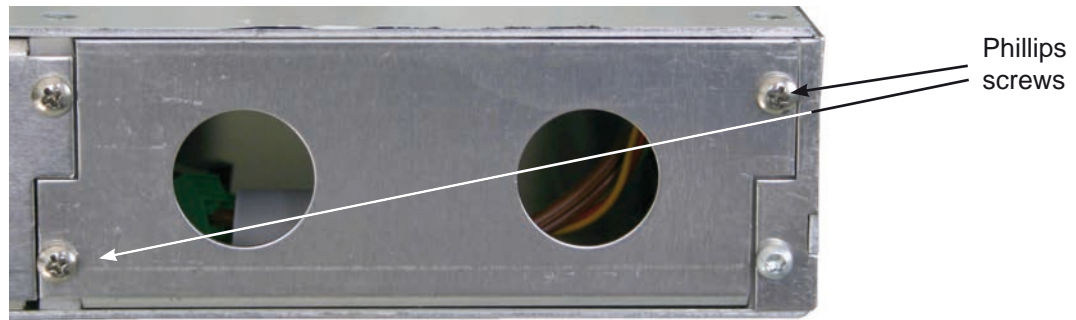


Figure 2: Position of the blind panel on delivery of U 100

To remove the blind panel, unscrew the two Phillips screws indicated in the above figure and remove the blind panel. The cables now visible must be connected to the backplane coded according to chapter 2.8.1, as shown in the following figure:



Figure 3: Connecting the voltage supply and signal lines

The backplane is now carefully inserted into the free slot of the U 100 base device and screwed in with the Phillips screws of the backplane. Here you must ensure that the cables are not jammed and that the backplane can be installed in the housing with only a small amount of pressure.

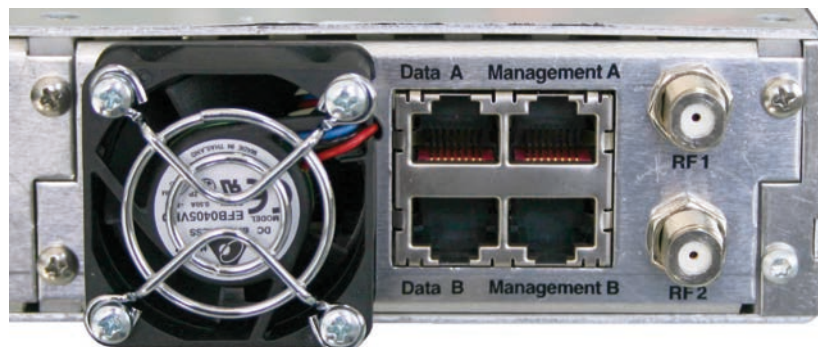


Figure 4: Correctly installed backplane

3 General introduction

3.1 Connecting the U 124 to a PC / laptop

When the operating voltage is connected, or after it is inserted into the slot of the base device, the U 124 switches on automatically. After the boot phase (ca. 90 seconds), the two management IP addresses appear in the display, along with other status messages.

If the device is connected to a PC / laptop via one of the network ports, and if the PC / laptop is suitably configured via the network settings, after you enter the IP address in the address line of the Web browser you can start configuring the U 124.

3.2 The Web browser user interface

The Web browser user interface is divided into the top frame, the left frame and the main frame.

The top frame

contains general information about the U 124.



Figure 1: General information in the top frame of the Web browser user interface

This information is as follows:

“SW: 4021” indicates the software level of the U 124 EdgePAL,

“FW: 1.2” is the level of the firmware in the U 124 EdgePAL,

“HW: 1” is the hardware version of the U 124 EdgePAL,

“Up: 0d 02h 36m 12s” is the duration of the connection, measured from the moment of the login,

“Time (UTC):” displays the time of the U 124.

The line in bold for the name, location and contact is made up of the settings in the “User” chapter.

In the right section of the top frame, status information for the U 124 is displayed, i.e. in the Web browser user interface, the latest error message is visible.

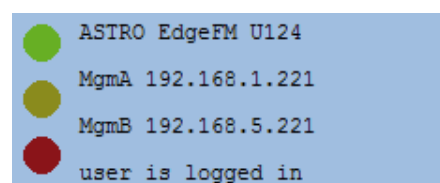


Figure 2: View of U 124 Display of the Web browser user interface

The left frame

contains the navigation bar for the various submenus, which are described in detail in the following chapters.

In the main frame,

the submenu is displayed according to the selection made in the navigation bar in the left frame.

4 Login

Before the U 124 can be configured there must be a login. This is performed in the “Login” sub-menu.

In the state on delivery, the login data is as follows:

User: admin or user

Password: astro

After correctly entering the login data, you can proceed with the configuration.



Note:

For security reasons, the user names and passwords should be changed from the state on delivery. This prevents unauthorized access.

Only one user / U 100 C can ever be logged into the U 124. At the very bottom of the left frame of the Web browser user interface, the user currently logged in is displayed.

5 Status

When you click on the “Status” submenu in the left frame, the following window appears (example):

The screenshot displays the 'ASTRO EdgeFM U124 Status' window. It is divided into several sections:

- Ethernet:** Shows network statistics for Management A and B, including MAC, Address, Subnet, Gateway, Mode, Transmit, and Receive rates.
- IP RX Channels:** A table listing IP receivers with columns for Channel, Port, Prim. RX IP socket, source, Rec. RX IP socket, source, Encapsulation, FEC, TS Rate, TSID / ONID, and Alias. Red arrows point to this section with the label 'Status display of the IP receivers'.
- RF Channels:** A large table listing radio frequency channels with columns for Modulator, Stream, Service, FIDs, Frequency, Reference, Status, and Dynamics. Red arrows point to this section with the label 'Status display of the FM output programme'.
- Miscellaneous:** A table showing various system status messages, including temperature (Temperature 1, 2, 3, 4), supply voltages (Supply 1.2 V to 5.5 V), power module status, and fan speed. Red arrows point to this section with the label 'Display of diverse status messages on the module temperature, the internal voltages and the power unit status'.
- System memory:** A table showing memory usage statistics, including total size, number of blocks, space used, space free, and size of largest free block. Red arrows point to this section with the label 'Memory status'.

At the bottom of the window, it says 'ASTRO Strobel Kommunikationssysteme GmbH'.

Figure 3: Status display in the “Status” submenu



6 Settings for the IP interfaces, IP management and base device

When you click on the “Main” submenu in the left frame, the following window appears (example):

ASTRO

ASTRO EdgeFM U124

Main Settings

Time: 25 Oct 2010 09:59:35 UTC. Up: 0d 01h 44m 36s. ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1

Name: ASTRO EdgeFM U124, Location: Headend in Cablecity, Contact: John Doe, admin@example.com

ASTRO EdgeFM U124

MgmA 192.168.1.162

MgmS 192.168.5.162

controller is logged in

Status

Logout

Main

IP RX

IP RX1

IP RX2

IP RX3

IP RX4

RF

RF1.1

RF1.2

RF1.3

RF1.4

RF1.5

RF1.6

RF1.7

RF1.8

RF2.1

RF2.2

RF2.3

RF2.4

RF2.5

RF2.6

RF2.7

RF2.8

User

TS Analyzer

Licensing

Update

System Log

Statistics

Network

controller on 192.168.1.110 is logged in

Timeout in 1797 s

IP Interface Settings

Property	Management A (eth0)	Management B (eth1)	Data A (eth2)	Data B (eth3)
MAC	00:17:72:02:01:05	00:17:72:03:01:05	00:17:72:04:01:05	00:17:72:05:01:05
Active	<input type="radio"/> on <input checked="" type="radio"/> off	<input type="radio"/> on <input checked="" type="radio"/> off	<input type="radio"/> on <input checked="" type="radio"/> off	<input type="radio"/> on <input checked="" type="radio"/> off
Mode	1 Gbit/s, full duplex	No link	1 Gbit/s, full duplex	1 Gbit/s, full duplex
Address	192 168 1 133	192 168 5 133	172 24 0 133	172 25 0 133
Subnet	255 255 255 0	255 255 255 0	255 255 0 0	255 255 0 0
Broadcast	192.168.1.255	192.168.5.255	172.24.255.255	172.25.255.255
Gateway	192 168 1 100	0 0 0 0	0 0 0 0	0 0 0 0

Note: Please use different IP address settings for each interface.

IP Management Settings

Property	Value
DNS	192 168 1 100
SNTP server	labor2.local 0.0.0.0
Time Source	SNTP Server

Note: Use 0.0.0.0 for unused or unknown DNS, or SNTP addresses.

U100 Rack Settings

Property	Value
Base Address	1
Slot Address	1
Power Modules	0

Submit Reset

Save settings to flash / Load settings from flash / Default settings / Reboot system

Save 2nd Load 2nd Default Reboot

Save 2nd: All settings are saved to an alternative config.
Load 2nd: All settings are loaded from an alternative config.
Default: Load factory default settings.
Reboot: Force reboot.

Figure 4: Overall view

The settings available are described in detail in the following sections.

6.1 Configuration of the IP interfaces

In the area of the user interface displayed below you can activate and deactivate the IP interfaces. The connection type is automatically detected and displayed by the U 124. (Here: 1 Gbit/s, full duplex for Data A and 100 MBit/s, full duplex for Management A).

IP Interface Settings

Property	Management A (eth0)	Management B (eth1)	Data A (eth2)	Data B (eth3)
MAC	00:17:72:02:01:05	00:17:72:03:01:05	00:17:72:04:01:05	00:17:72:05:01:05
Active	<input checked="" type="radio"/> on <input type="radio"/> off	<input type="radio"/> on <input checked="" type="radio"/> off	<input checked="" type="radio"/> on <input type="radio"/> off	<input checked="" type="radio"/> on <input type="radio"/> off
Mode	1 Gbit/s, full duplex	No link	1 Gbit/s, full duplex	1 Gbit/s, full duplex
Address	192 . 168 . 1 . 133	192 . 168 . 5 . 133	172 . 24 . 0 . 133	172 . 25 . 0 . 133
Subnet	255 . 255 . 255 . 0	255 . 255 . 255 . 0	255 . 255 . 0 . 0	255 . 255 . 0 . 0
Broadcast	192.168.1.255	192.168.5.255	172.24.255.255	172.25.255.255
Gateway	192 . 168 . 1 . 100	0 . 0 . 0 . 0	0 . 0 . 0 . 0	0 . 0 . 0 . 0

Note: Please use different IP address settings for each interface.

Figure 5: IP interface configuration

Changes to the IP addresses must be transferred to the U 124 using the "Submit" button.

Note:

When programming the IP addresses, make sure the addresses are not already allocated in your network. Address conflicts lead to malfunctions in the network.



6.2 IP management configuration

In the IP management configuration, the DNS server and the SNTP server are entered. If a valid entry is made under "SNTP server", this can be used as a time reference. The MPEG flows (TDT) are additional time references.

IP Management Settings

Property	Value
DNS	192 . 168 . 1 . 100
SNTP server	192.168.1.100 0.0.0.0
Time Source	SNTP Server

Note: Use 0.0.0.0 for unused or unknown DNS, or SNTP addresses.

Figure 6: IP management configuration

6.3 U 100 settings

Under “U 100 Rack Settings” an address can be allocated to the relevant base device. The number of the currently selected slot is displayed below it:

U100 Rack Settings

Property	Value
Base Address	2
Slot Address	1
Power Modules	2

Figure 7: Rack settings

If the U 124 is managed using the U 100-C controller and there are several U 100 base devices in use, then each base device must have a different address. The slot address is determined using the backplane coding (see chapter 2.8.1).

6.4 Saving and loading a configuration / Default and reboot

The current configuration of the U 124 is always written to the device using the “Submit” buttons, and is therefore activated immediately. If you want to save the current status, you press the “Save 2nd” button. This current status is then saved on the SD card in the U 124. You can call up this status again using the “Load 2nd” button. Saving the configuration on the local computer or FTP server is explained in the “Update” chapter.

Figure 8: Saving and loading / default and reboot

Save settings to flash / Load settings from flash / Default settings / Reboot system

Save 2nd: All settings are saved to an alternative config.
 Load 2nd: All settings are loaded from an alternative config.
 Default: Load factory default settings.
 Reboot: Force reboot.

The “Default” button is used to restore the factory settings.

Note:



With the factory settings, all the settings apart from the user and network settings of the data and management ports are reset to the state on delivery!

The “Reboot” button restarts the U 124 with the last settings that were entered.

7 Configuration of the IP inputs

When you click on the “IP RX” submenu in the left frame, the following window appears (example):

ASTRO EdgeFM U124
IP RX Channel Settings
 Time: 25 Oct 2010 09:59:35 UTC, Up: 0d 01h 44m 36s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
 Name: ASTRO EdgeFM U124, Location: Headend in Cablecity, Contact: John Doe, admin@example.com

IP RX Channel Settings

Channel	Enable	Port	Encapsulation	Prim. RX IP socket, source	Sec. RX IP socket, source	TSID / ONID	Alias	Link
IP RX1	<input checked="" type="radio"/> on <input type="radio"/> off	A. automatic Primary	RTP/UDP/IP Mult. PCR	232.19.100.131.10000.0.0.0.0	0.0.0.0.0.0.0.0	1022 / 1	KTO, GlobeCast	Play / Play
IP RX2	<input checked="" type="radio"/> on <input type="radio"/> off	A. automatic Primary	RTP/UDP/IP Mult. PCR	232.19.100.129.10000.0.0.0.0	0.0.0.0.0.0.0.0	1051 / 1	EinsExtra, ARD	Play / Play
IP RX3	<input checked="" type="radio"/> on <input type="radio"/> off	A. automatic Primary	RTP/UDP/IP Mult. PCR	232.19.100.132.10000.0.0.0.0	0.0.0.0.0.0.0.0	1079 / 1	3sat, ZDFvision	Play / Play
IP RX4	<input checked="" type="radio"/> on <input type="radio"/> off	A. automatic Primary	RTP/UDP/IP Mult. PCR	232.19.100.142.10000.0.0.0.0	0.0.0.0.0.0.0.0	8707 / 8468	TELE 5, BetaDigital	Play / Play

Submit Reset

ASTRO Strobel Kommunikationssysteme GmbH

Figure 9: Overview of the IP input configuration

Here the four IP inputs to be configured are activated or deactivated, and their current configuration is displayed. You go to the detailed settings either by clicking the relevant channel (e.g. [IP RX3](#)) or clicking the relevant submenu in the left frame.

ASTRO EdgeFM U124
IP RX1 Channel Settings
 Time: 25 Oct 2010 09:59:35 UTC, Up: 0d 01h 44m 36s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
 Name: ASTRO EdgeFM U124, Location: Headend in Cablecity, Contact: John Doe, admin@example.com

IP RX1 Channel Settings

Property	Data A (eth2) 1G	Data B (eth3) 1G
Primary Receive IP Port	<input checked="" type="radio"/> use 232.19.100.131.10000	<input type="radio"/> use 232.19.100.131.10000
Primary Source Select	<input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0	<input checked="" type="checkbox"/> like Data A <input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0
Secondary Receive IP Port	<input checked="" type="radio"/> use 0.0.0.0.0.0.0.0	<input type="radio"/> use 0.0.0.0.0.0.0.0
Secondary Source Select	<input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0	<input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0 <input type="radio"/> 0

Property	Data A (eth2) + Data B (eth3)
Enable	<input checked="" type="radio"/> on <input type="radio"/> off
Port	A <input type="text"/> automatic <input type="text"/>
Encapsulation	<input checked="" type="radio"/> RTP/UDP/IP <input type="radio"/> UDP/IP <input type="radio"/> automatic <input type="radio"/> manual
Bitrate	<input checked="" type="radio"/> Single PCR (SPTS) <input type="radio"/> Mult. PCR (MPTS) <input type="radio"/> automatic <input type="radio"/> manual
TSID / ONID	1022 1
Alias manual / automatic	<input type="text"/> KTO, GlobeCast

Enter the IP address and UDP port that will be matched for this channel.
 For an IP multicast, use an address in the range 225.0.0.0 to 239.255.255.255.
 Use 0.0.0.0 to disable Source Select or Secondary Receive IP.

Submit Reset

ASTRO Strobel Kommunikationssysteme GmbH

Figure 10: Detailed settings of the IP receiver

To enable the greatest possible path redundancy, the U 124 has various different configuration options for the IP receivers. The Data A and Data B ports can be configured completely independently of one another. IGMPv3 enables what is known as “Source Select”, i.e. the IP receiver can request the data from a preferred source.

Property	Data A (eth2) 1G						Data B (eth3) 1G					
Primary Receive IP Port	○ use	232	19	100	131	10000	✔ like Data A	232	19	100	131	10000
Primary Source Select		0	0	0	0			0	0	0	0	
Secondary Receive IP Port	○ use	0	0	0	0	0		0	0	0	0	0
Secondary Source Select		0	0	0	0			0	0	0	0	

Figure 11: Setting the Multicast addresses

The “use” selection box defines the data source used. This data source is defined via the Multicast address and can - if this Multicast address is provided by multiple senders - be used preferentially by the IP receiver. The IP address of the preferred source is entered under “Primary / Secondary Source Select”. If 0.0.0.0 is displayed here, the Source Select function is deactivated. If different signal paths are supplied by the same sending equipment, it can make sense to configure Data B exactly like Data A. This is easily performed by activating “like Data A”.

Property	Data A (eth2) + Data B (eth3)	
Enable	<input type="radio"/> on <input type="radio"/> off	
Port	A	automatic
Encapsulation	<input type="radio"/> RTP/UDP/IP <input type="radio"/> UDP/IP	<input type="radio"/> automatic <input type="radio"/> manual
Bitrate	<input type="radio"/> Single PCR (SPTS) <input type="radio"/> Mult. PCR (MPTS)	<input type="radio"/> automatic <input type="radio"/> manual
TSID / ONID	1022	1
Alias manual / automatic		KTO_GlobeCast

Figure 12: Settings for the IP input signal format

In the “Enable” line, the IP receiver is activated or deactivated.

In the “Port” line, the data interface is selected (A or B) and the preferred data interface is set. This function enables the U 124 to switch to the second interface after an input signal has failed, and to switch back when the failed signal has been re-established (prefer A or B). If you select the “auto” option, the IP receiver remains on the substitute interface until it is manually switched back, or until this interface also fails.

Under “Encapsulation” the protocol used in the sender is set: RTP/UDP/IP or UDP/IP. However, the U 124 is also able to detect the protocol automatically and evaluate it accordingly.

For the “Bitrate” you can choose between “Single PCR (SPTS)” and “Multiple PCR (MPTS)”. Here the U 124 can also detect the status automatically and process it.

To have a better overview during the configuration of the HF parameters, you have the option of entering an alias. If this entry option is not used, the first service in the transport stream is automatically used as the alias.

8 Configuration of the HF outputs

You go to the overview of the HF parameters via the “RF” submenu in the left frame. All 16 output channels with the related data on the data flow are displayed, as well as the status of the respective FM program. Here the output channel can be activated or deactivated. If you select “Standby” here, only the HF is deactivated. However, the configuration of the output signal remains active, along with the analysis of the input data flow.

Changes must be written to the device by pressing the “Submit” button.

Modulator	Enable	Stream	Service	Frequency	Level	Reference	Status
RF1.1	On	off TSD 1113 OHIO-1 Alias K-TV, MEDIA BROADCAST IP_RX3	HIT RADIO FFH, MEDIA BROADCAST SID 12660	96.000000 MHz	0.0 dB		OK
RF1.2	On	off TSD 1113 OHIO-1 Alias K-TV, MEDIA BROADCAST IP_RX3	planet radio, MEDIA BROADCAST SID 12661	96.500000 MHz	0.0 dB		OK
RF1.3	On	off TSD 1113 OHIO-1 Alias K-TV, MEDIA BROADCAST IP_RX3	harmony.fm, MEDIA BROADCAST SID 12662	97.000000 MHz	0.0 dB		OK
RF1.4	On	off TSD 1079 OHIO-1 Alias 3sat, ZDFvision IP_RX2	CHULTUR, ZDFvision SID 28012	97.500000 MHz	0.0 dB	on	OK
RF1.5	On	off TSD 1079 OHIO-1 Alias 3sat, ZDFvision IP_RX2	CLF, ZDFvision SID 28013	98.000000 MHz	0.0 dB	off	OK
RF2.1	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	MDR SPITZ, ARD MDR SID 28433	98.500000 MHz	0.0 dB		OK
RF2.2	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	MDR KLASSIK, ARD MDR SID 28435	99.000000 MHz	0.0 dB		OK
RF2.3	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	N-JOY, ARD NDR SID 28440	99.500000 MHz	0.0 dB		OK
RF2.4	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	Antenne Brandenburg, ARD rbb SID 28454	100.000000 MHz	0.0 dB		OK
RF2.5	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	radioBERLIN 88.8, ARD rbb SID 28455	100.500000 MHz	0.0 dB		OK
RF2.6	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	radioeins, ARD rbb SID 28456	101.000000 MHz	0.0 dB		OK
RF2.7	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	Fritz, ARD rbb SID 28457	101.500000 MHz	0.0 dB	on	OK
RF2.8	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	SR1 Europaweite, ARD SR SID 28461	102.000000 MHz	0.0 dB	off	OK
RF2.9	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	SR2 KulturRadio, ARD SR SID 28462	102.500000 MHz	0.0 dB		OK
RF2.10	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	SR3 Saarlandwelle, ARD SR SID 28463	103.000000 MHz	0.0 dB		OK
RF2.11	On	off TSD 1093 OHIO-1 Alias Bayern 1, ARD BR IP_RX1	SWR 1 BW, ARD SWR SID 28465	103.500000 MHz	0.0 dB		OK

Figure 13: Overview of the HF parameters

If you select the option “On” in the “Reference” column, then the level set in the modulation parameters will be used as the reference value. A deviation of 2.5 dB leads to a warning message, a deviation of 3 dB leads to the output channel being switched off.


You go to the detailed settings either by clicking the relevant channel (e.g. [RF 1.1](#)) or clicking the relevant submenu in the left frame.

In the detailed view of a channel, the programme to be converted into FM is selected under “Input Selection”. This programme can be applied from any of the four IP receivers.

Property	Value	Info
RF	On / standby / off Frequency 96.00 MHz Level 0.0 dB Deviation 0.0 dB	
Radio Data System	on / off	
Programme Service name	HIT RADIO FFH	PS change time 0 s
Programme Identification	On 0000	
Programme Type	0	10 Pop M
Traffic Programme Identification	on / off	
Music Speech switch	dynamic / static	music / speech
RadioTest	dynamic / static	KLINGT FRISCHER
Clock Time and date	on / off source: UECP Service 1.1	TOT IP RX1

Figure 14: Output channel setting


In the “Stream Selection” area, the PIDs of the PCR are displayed, along with the PIDs of the selected audio stream.

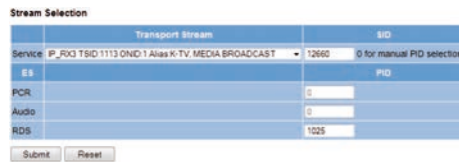

The "Stream Selection" interface shows a table with columns for "Transport Stream" and "PID". The "Service" is set to "IP_FOG TSD 1113 OND 1 Atlas TV MEDIA BROADCAST". The "PID" is set to "12660". Below the table, there are input fields for "PCR" (set to 0), "Audio" (set to 0), and "RDS" (set to 1025). At the bottom, there are "Submit" and "Reset" buttons.

Figure 15: Stream selection

In the “Modulation” area, all the settings relating to the FM output signal are made:

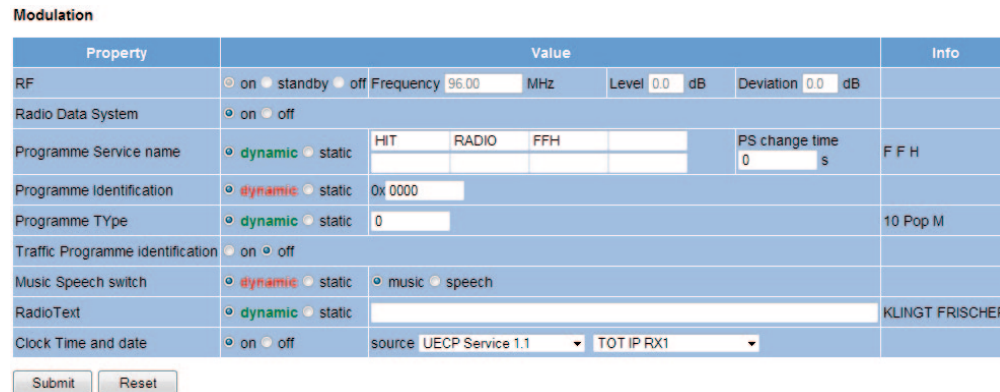

The "Modulation" interface shows a table with columns for "Property" and "Value". The "RF" property has a value of "on" (selected) and "standby" (unselected). The "Radio Data System" property has a value of "on" (selected) and "off" (unselected). The "Programme Service name" property has a value of "dynamic" (selected) and "static" (unselected). The "Programme Identification" property has a value of "dynamic" (selected) and "static" (unselected). The "Programme Type" property has a value of "dynamic" (selected) and "static" (unselected). The "Traffic Programme identification" property has a value of "on" (selected) and "off" (unselected). The "Music Speech switch" property has a value of "dynamic" (selected) and "static" (unselected). The "RadioText" property has a value of "dynamic" (selected) and "static" (unselected). The "Clock Time and date" property has a value of "on" (selected) and "off" (unselected). At the bottom, there are "Submit" and "Reset" buttons.

Figure 16: Setting the PAL modulator

“RF” line:

- Activating and deactivating the output signal / Standby: output signal selected and configured by HF switched off
- Selecting the output frequency
- Setting the output level
- Setting the audio hub

Line “Radio data system”:

- Activating the RDS

Line “Program Service name”.

- If the data are available in TS and if the option “dynamic”off is selected, the PS data will also be transmitted. If “static” is selected, you have the option of entering 8 blocks of 8 characters and determining the time interval (min. 3 s). For a static configuration, but a PS is in the TS, the TS data are processed with priority.

Line “Programme identification”.

- If the PI is transmitted on the sender side, then the setting “dynamic” will result in transmission on the output side. If “static” is configured, a sender ID is entered, then this setting is transmitted, until there is a PI on the input side.

Line “Programme type”:

- Transmission of the programme type ID (pop, news etc.). In this case, the PTY in the TS will be transmitted with priority over the manually configured PTY.

- Line "Traffic Programme ident. ": • Activates the transmission of the traffic radio ID
- Line "Music, speech Switch": • Transmits the ID, if provided by the sender, whether music or speech is being transmitted. Accordingly, some end devices can automatically adjust the tone control.
- Line "Radio text" • Transmits, if provided by the sender, the radio text. If "static" is configured and a text entered, this will be transmitted, until radio text is dynamically transmitted by the sender.
- Line "Clock time and date": • If this option is activated, then the display of the current time will appear in the receiver. The radio service in TS or the IP RX can be used as the synchronisation source ("source"). If both sources are configured, the TS is evaluated first and then the IP RX.

9 User administration

You reach the user management by clicking on the “User” submenu. The U 124 allows you to create four different users. In the state on delivery, “admin”, “user” and “bc4” are created, all with the password “astro”.




Note:

For security reasons, the user names and passwords should be changed from the state on delivery. This prevents unauthorized access.

In the “Timeout” line the minutes are entered until the U 124 automatically logs the user out if no configuration change has been registered during this period.

In the lower area of the “User Administration” table, you can enter the name, location and responsible contact person. These entries also appear in the top frame.

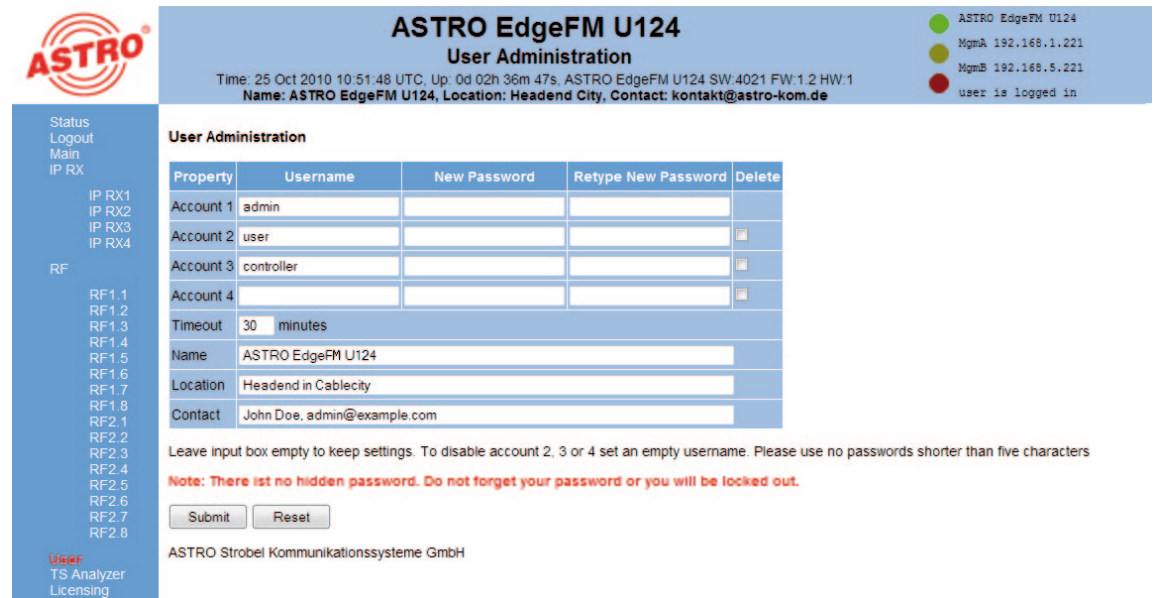

The screenshot shows the ASTRO EdgeFM U124 User Administration web interface. The top header bar is blue and contains the ASTRO logo, the device name 'ASTRO EdgeFM U124', the title 'User Administration', and system status information including time, uptime, and IP addresses. A sidebar on the left lists navigation options: Status, Logout, Main, IP RX, RF (with sub-items RF1.1 to RF2.8), User, TS Analyzer, and Licensing. The main content area is titled 'User Administration' and contains a table for managing four accounts. The table has columns for Property, Username, New Password, Retype New Password, and Delete. Below the table, there are input fields for Timeout (set to 30 minutes), Name (ASTRO EdgeFM U124), Location (Headend in Cablecity), and Contact (John Doe, admin@example.com). A note at the bottom states: 'Leave input box empty to keep settings. To disable account 2, 3 or 4 set an empty username. Please use no passwords shorter than five characters. Note: There is no hidden password. Do not forget your password or you will be locked out.' There are 'Submit' and 'Reset' buttons at the bottom.

Property	Username	New Password	Retype New Password	Delete
Account 1	admin			
Account 2	user			
Account 3	controller			
Account 4				

Timeout: 30 minutes

Name: ASTRO EdgeFM U124

Location: Headend in Cablecity

Contact: John Doe, admin@example.com

Leave input box empty to keep settings. To disable account 2, 3 or 4 set an empty username. Please use no passwords shorter than five characters.

Note: There is no hidden password. Do not forget your password or you will be locked out.

Submit Reset

ASTRO Strobel Kommunikationssysteme GmbH

Figure 17: User management

Changes must be transferred to the U 124 using “Submit”.

10 Transport stream (TS) analyzer

The U 124 can be equipped with a Transport Stream Analyzer by obtaining a licence. This Analyzer displays the structure of the MPEG2 TS, from the tables to the individual PID and its service. You click on the “TS Analyzer” submenu to reach the selection of the transport stream to be analysed. When you select a TS in the “Analyze” line and press the “Submit” button, the selected transport stream is analysed.



ASTRO EdgeFM U124

TS Analyzer

Time: 25 Oct 2010 10:51:48 UTC, Up: 0d 02h 36m 47s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
Name: ASTRO EdgeFM U124, Location: Headend City, Contact: kontakt@astro-kom.de

● ASTRO EdgeFM U124

● MgmA 192.168.1.221

● MgmB 192.168.5.221

● user is logged in

Status
Logout
Main
IP RX

RF

IP RX1
IP RX2
IP RX3
IP RX4

RF1.1
RF1.2
RF1.3
RF1.4
RF1.5
RF1.6
RF1.7
RF1.8
RF2.1
RF2.2
RF2.3
RF2.4
RF2.5
RF2.6
RF2.7
RF2.8

User
TS Analyzer
Licensing
Update
System Log
Statistics
Network

user
on 192.168.1.40
is logged in.

Timeout in 1780 s.

TS Analyzer

Alias	KTO, Glob eCast	Eins Extr a, ARD	3sat ZDFv islo n	TELE 5, Beta Digi tal	ASTRO
TSID ONID	1022 1	1051 1	1079 1	8707 8468	65535 65535
Source	IP RX1	IP RX2	IP RX3	IP RX4	Test Gen.
Analyze	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>

Standard	Table			
MPEG	<input checked="" type="checkbox"/> PAT	<input checked="" type="checkbox"/> CAT	<input checked="" type="checkbox"/> TSDT	<input checked="" type="checkbox"/> PMTs
DVB	<input checked="" type="checkbox"/> NIT actual	<input checked="" type="checkbox"/> NIT other (only first found)	<input checked="" type="checkbox"/> SDT actual	<input checked="" type="checkbox"/> SDT other (only first found)
	<input checked="" type="checkbox"/> EIT actual present/following	<input checked="" type="checkbox"/> EIT actual schedule	<input checked="" type="checkbox"/> BAT (only first found)	<input checked="" type="checkbox"/> RST (only first found)
	<input checked="" type="checkbox"/> TDT	<input checked="" type="checkbox"/> TOT		

Please be patient until measurements are finished. (e.g. EIT may take a long time.)

Submit Reset

Analyzing SI Tables...

☒ PAT (PID:0), TSID:65535, version:0, valid:current, SDT actual (PID:17), TSID:65535, ONID:65535, version:0, valid:current

☒ SID:0, NID_PID:16

☒ SID:1, PMT_PID:100

☒ PMT (PID:100), SID:1, PCR_PID:101, version:0, valid:current

☒ ES_PID:101, ISO/IEC 11172 Audio

☒ Audio_stream, id, Layer II

☒ ISO_639_language

☒ xxx_clean_effects

☒ Stream_Identifier, 1

☒ SDT Status:running, Free, EIT_present_following

☒ Service, name **ASTRO**, provider **ASTRO**, type **Digital radio sound**

☒ CAT (PID:1), version:0, valid:current

☒ NIT actual (PID:16), NID:65535, version:0, valid:current

☒ TDT (PID:20), UTC:25 Oct 2010 09:50:17

...done!

ASTRO Strobel Kommunikationssysteme GmbH

Figure 18: Transport Stream (TS) Analyzer view

The optionally available TS Analyzer provides an effective way of checking that the IP input signal is complete, as regards the services / tables it contains. When an analysis has been started, it can take several minutes to complete. In particular, the analysis of the EIT (Event Information Table) can take somewhat longer.

A data stream can be received with CBR (Constant Bit Ratio) in the U 124, or with VBR (Variable Bit Ratio). In any case, CBR is used in MPTS (Multiple Program Transport Stream), but also in SPTS (Single Program Transport Stream). However, SPTS can also be sent with VBR.

Under “Packet Mode” you can choose between “continuous” or “burst” for the configuration of the respective ASI outputs after the IP RX.

The TSID and ONID are displayed according to the transport stream selected, and an alias can be entered for a better overview of the transport streams (see also Figure 11). If no alias is entered, the name of the first service of the transport stream appears.

11 Licencing

Some functions of the U 124 (e.g. the TS Analyzer) must be activated using a licence key. The licence key can be obtained from ASTRO along with the function. The text sent is then copied into the text input field and transferred to the device using "Submit".



The screenshot shows the web interface of the ASTRO EdgeFM U124. The top header bar is blue and contains the ASTRO logo, the title "ASTRO EdgeFM U124", the "Licensing" sub-header, and system status information including time, uptime, and MAC addresses. The left sidebar is blue and lists navigation options: Status, Logout, Main, IP RX, RF, and User. The main content area is white and displays the "Licensing" section. It shows the device's HWID and a message indicating that the device has already been licensed. Below this, there is a text input field for entering a licence key, with "Submit" and "Reset" buttons. The bottom of the sidebar shows the user is logged in on 192.168.1.40.


Figure 19: Input mask for licence key

To order additional licences, you must enter the MAC address of the device. You will find the MAC address on the Web browser interface, in the "Licensing" submenu (HWID). After the MAC address is passed on, the licence keys are generated at the ASTRO company and issued by e-mail or on a CD.

The format of a licence key is a text document (e.g. Lic001772000222.txt). You can use copy / paste to copy the key(s) into the input mask and press the "Submit" button to transfer the licences to the U 124. If the licence is valid, this is confirmed with the message "License is valid". An error message is displayed for an invalid licence.

12 Software update / saving and loading a configuration

When you click on the “Update” submenu in the left frame, the following window appears (example):

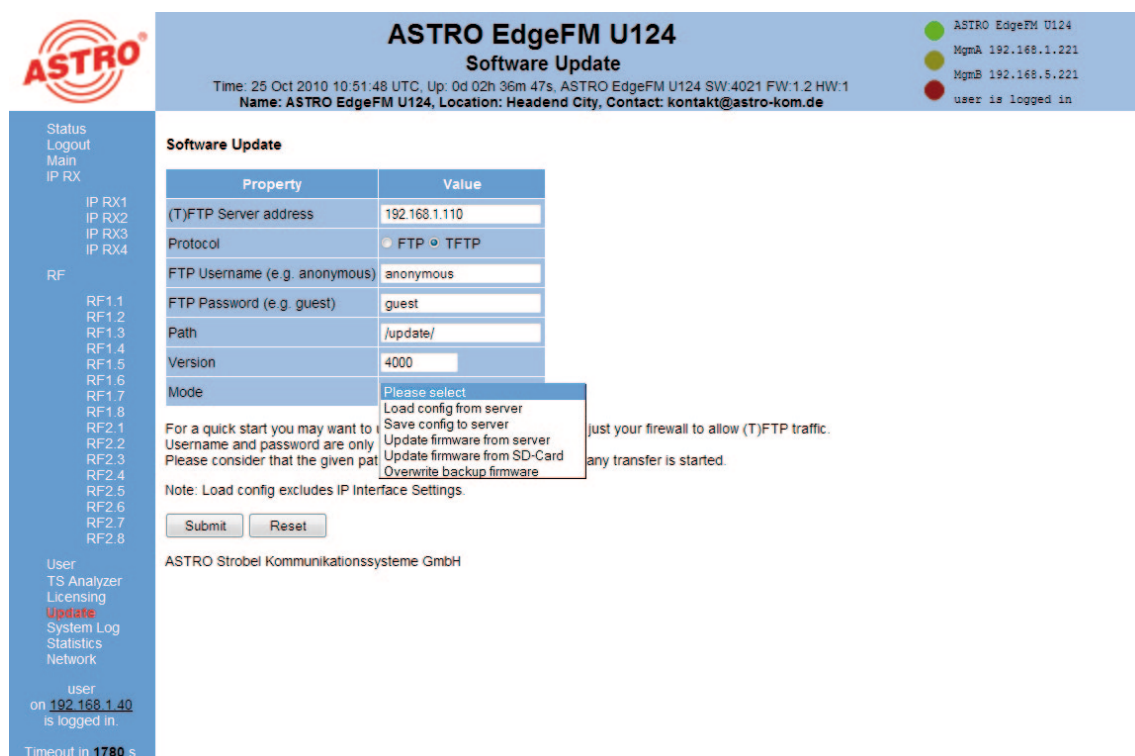

ASTRO EdgeFM U124
Software Update
 Time: 25 Oct 2010 10:51:48 UTC, Up: 0d 02h 36m 47s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
 Name: ASTRO EdgeFM U124, Location: Headend City, Contact: kontakt@astro-kom.de

● ASTRO EdgeFM U124
 ● MgmA 192.168.1.221
 ● MgmB 192.168.5.221
 ● user is logged in

Software Update

Property	Value
(T)FTP Server address	192.168.1.110
Protocol	● FTP ○ TFTP
FTP Username (e.g. anonymous)	anonymous
FTP Password (e.g. guest)	guest
Path	/update/
Version	4000
Mode	Please select

For a quick start you may want to:
 Username and password are only
 Please consider that the given path

just your firewall to allow (T)FTP traffic.
 any transfer is started.

Note: Load config excludes IP Interface Settings.

Submit Reset

ASTRO Strobel Kommunikationssysteme GmbH

User
 TS Analyzer
 Licensing
 Update
 System Log
 Statistics
 Network

user
 on 192.168.1.40
 is logged in.

Timeout in 1780 s

Figure 20: Action selection in the “Software Upgrade” submenu

Here you have the option to store the configuration of the U 124 on an FTP server.

Clicking on the “Update” submenu takes you to the settings for the U 124 software update. In the “(T)FTP Server address” line you enter the (T)FTP server address at which the current software for the U 124 is stored.

In the “Protocol” line you can choose between “FTP” (File Transfer Protocol) and “TFTP” (Trivial File Transfer Protocol). If you choose the “TFTP” option, it is not necessary to enter the user name and the password.

Under “Path” you must enter the path under which the U 124 software for the update was stored. You must ensure that the software is stored in the path entered (with “/” at the start and the end), otherwise no update is performed. You must also ensure that any firewall installed allows (T)FTP communication.

The “Update” submenu also provides the option to save the configuration of the U 124 on an FTP server, or to load a configuration into the U 124. Loading a configuration into the U 124 does not affect the settings of the IP interfaces.

13.1 Update using example of a TFTP server for Windows

If no fixed (T)FTP server is set up for updating the U 124, you also have the option to transfer locally saved update files onto the device. Here it is recommended to use a TFTP programme. The procedure is described in the following section using the “Tftpd32” programme.

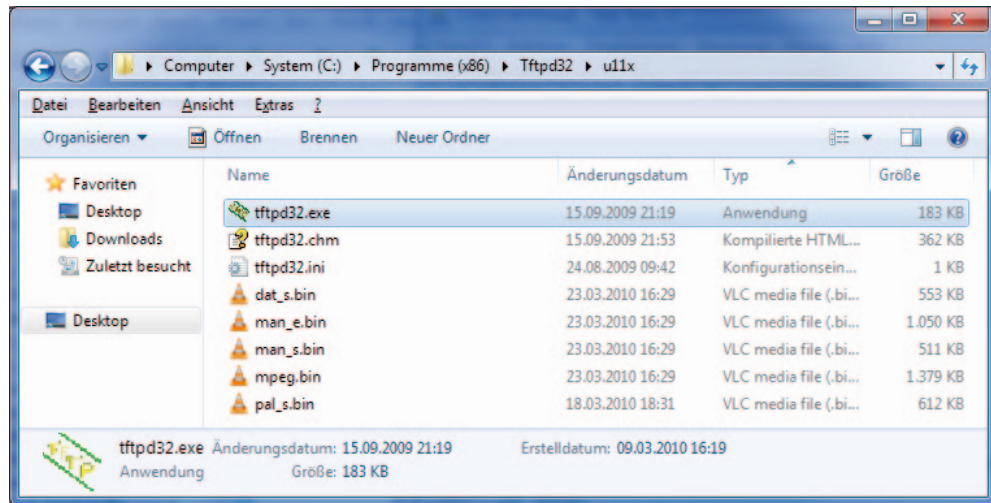


Figure 21: Example view of the U 124 update folder with update files and "tftpd32" TFTP programme.

The "tftpd32" programme is started directly from the folder with the U 124 update files. In the window that appears, you first press the "Settings" button, then enter the settings according to Figure 21:

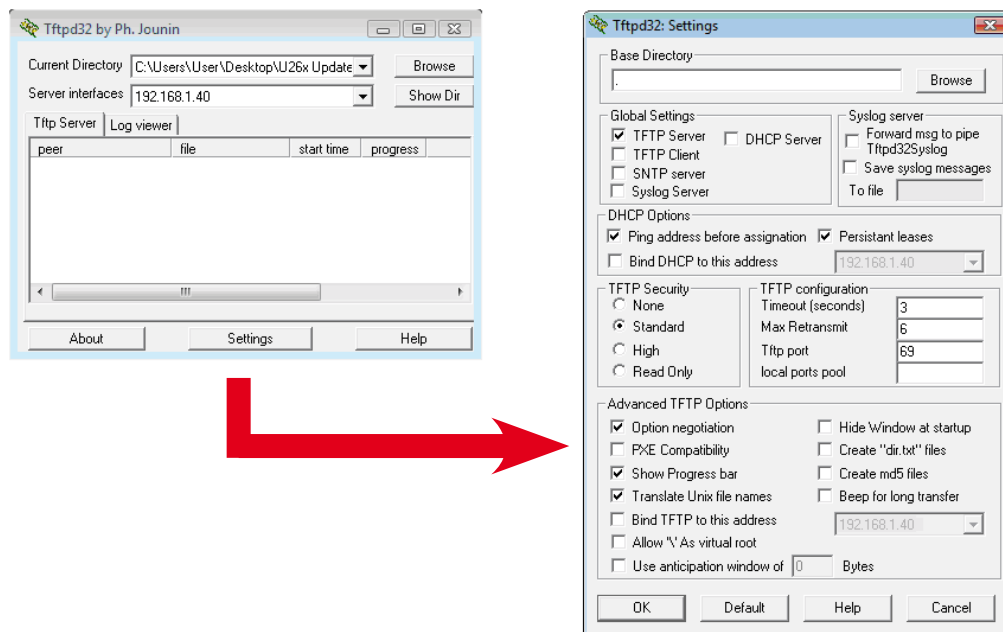


Figure 22: Settings for the tftpd32 TFTP programme

To start the update, the IP address of the local computer must be entered as the server address in the line "(T)FTP Server address" (Figure 23), and the protocol set to TFTP. Thus it is no longer necessary to enter a user name and a password. In the "File" line you now select the option "Update" and press the "Submit" button to start the update.


NOTE:



A reboot or a network failure during an update process can cause the U 124 software to crash irrevocably. The device then has to be returned to ASTRO for repair.

13 System log

Clicking on the “System Log” submenu takes you to the log of the U 124. All the procedures relevant to the operation of the device are documented here. Additionally, the SNMP settings are made here (defining the trap recipients, the trap community & the trap filter). Also, the “Log file filter” line can be used to define which events lead to an entry in the log.

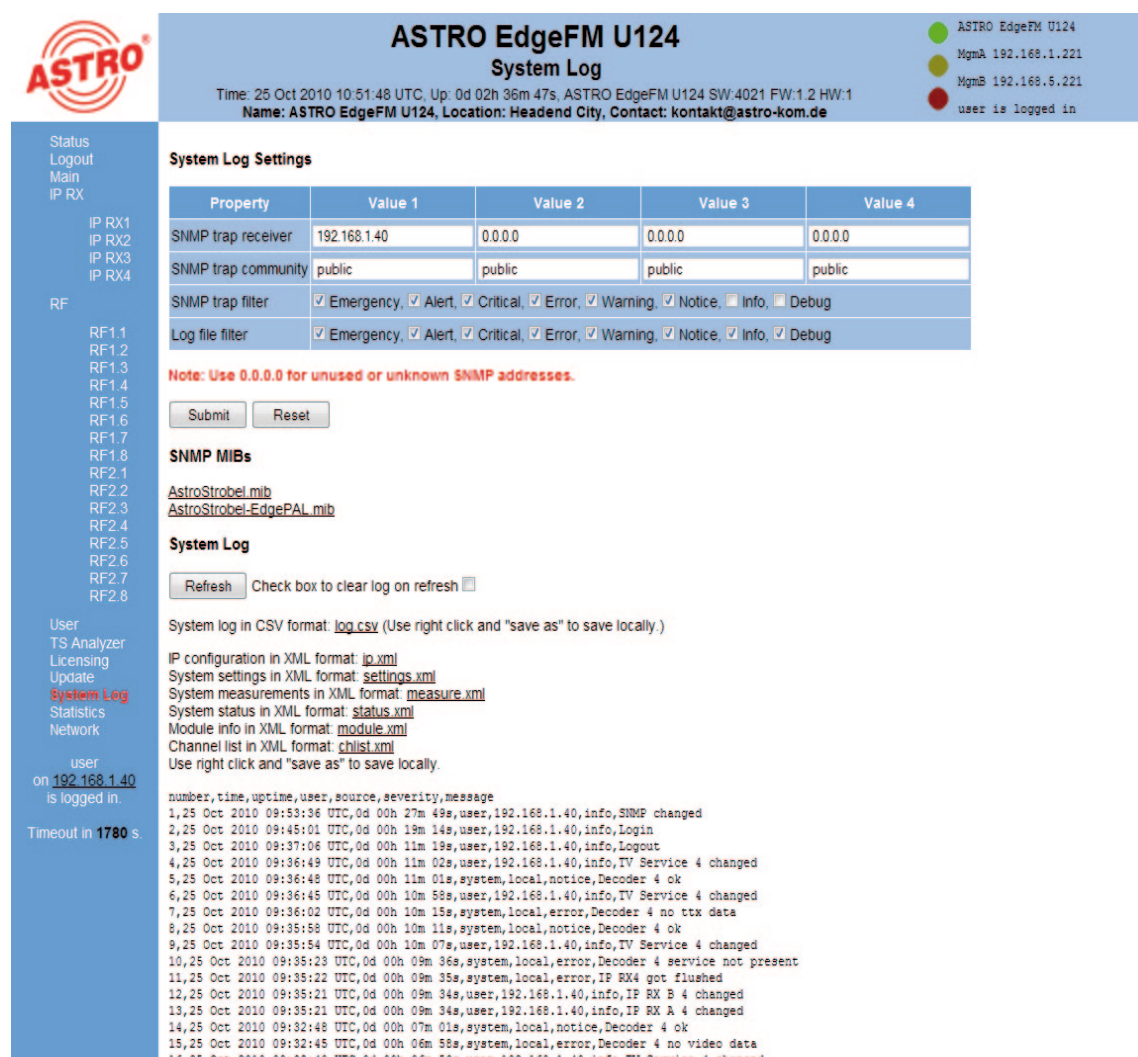

ASTRO EdgeFM U124
System Log

Time: 25 Oct 2010 10:51:48 UTC, Up: 0d 02h 36m 47s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
Name: ASTRO EdgeFM U124, Location: Headend City, Contact: kontakt@astro-kom.de

● ASTRO EdgeFM U124
● MgmA 192.168.1.221
● MgmB 192.168.5.221
● user is logged in

Status
Logout
Main
IP RX

IP RX1
IP RX2
IP RX3
IP RX4

RF

RF1.1
RF1.2
RF1.3
RF1.4
RF1.5
RF1.6
RF1.7
RF1.8
RF2.1
RF2.2
RF2.3
RF2.4
RF2.5
RF2.6
RF2.7
RF2.8

User
TS Analyzer
Licensing
Update
System Log
Statistics
Network

user
on 192.168.1.40
is logged in.
Timeout in 1780 s.

System Log Settings

Property	Value 1	Value 2	Value 3	Value 4
SNMP trap receiver	192.168.1.40	0.0.0.0	0.0.0.0	0.0.0.0
SNMP trap community	public	public	public	public
SNMP trap filter	<input checked="" type="checkbox"/> Emergency, <input checked="" type="checkbox"/> Alert, <input checked="" type="checkbox"/> Critical, <input checked="" type="checkbox"/> Error, <input checked="" type="checkbox"/> Warning, <input checked="" type="checkbox"/> Notice, <input type="checkbox"/> Info, <input type="checkbox"/> Debug			
Log file filter	<input checked="" type="checkbox"/> Emergency, <input checked="" type="checkbox"/> Alert, <input checked="" type="checkbox"/> Critical, <input checked="" type="checkbox"/> Error, <input checked="" type="checkbox"/> Warning, <input checked="" type="checkbox"/> Notice, <input checked="" type="checkbox"/> Info, <input checked="" type="checkbox"/> Debug			

Note: Use 0.0.0.0 for unused or unknown SNMP addresses.

Submit Reset

SNMP MIBs

[AstroStrobel.mib](#)
[AstroStrobel-EdgePAL.mib](#)

System Log

Refresh Check box to clear log on refresh ☐

System log in CSV format: [log.csv](#) (Use right click and "save as" to save locally.)

IP configuration in XML format: [ip.xml](#)
System settings in XML format: [settings.xml](#)
System measurements in XML format: [measure.xml](#)
System status in XML format: [status.xml](#)
Module info in XML format: [module.xml](#)
Channel list in XML format: [chlist.xml](#)
Use right click and "save as" to save locally.

```
number,time,uptime,user,source,severity,message
1,25 Oct 2010 09:53:36 UTC,0d 00h 27m 49s,user,192.168.1.40,info,SNMP changed
2,25 Oct 2010 09:45:01 UTC,0d 00h 19m 14s,user,192.168.1.40,info,Login
3,25 Oct 2010 09:37:06 UTC,0d 00h 11m 19s,user,192.168.1.40,info,Logout
4,25 Oct 2010 09:36:49 UTC,0d 00h 11m 02s,user,192.168.1.40,info,TV Service 4 changed
5,25 Oct 2010 09:36:48 UTC,0d 00h 11m 01s,system,local,notice,Decoder 4 ok
6,25 Oct 2010 09:36:45 UTC,0d 00h 10m 58s,user,192.168.1.40,info,TV Service 4 changed
7,25 Oct 2010 09:36:02 UTC,0d 00h 10m 15s,system,local,error,Decoder 4 no ttx data
8,25 Oct 2010 09:35:58 UTC,0d 00h 10m 11s,system,local,notice,Decoder 4 ok
9,25 Oct 2010 09:35:54 UTC,0d 00h 10m 07s,user,192.168.1.40,info,TV Service 4 changed
10,25 Oct 2010 09:35:29 UTC,0d 00h 09m 36s,system,local,error,Decoder 4 service not present
11,25 Oct 2010 09:35:22 UTC,0d 00h 09m 35s,system,local,error,IP RX4 got flushed
12,25 Oct 2010 09:35:21 UTC,0d 00h 09m 34s,user,192.168.1.40,info,IP RX B 4 changed
13,25 Oct 2010 09:35:21 UTC,0d 00h 09m 34s,user,192.168.1.40,info,IP RX A 4 changed
14,25 Oct 2010 09:32:48 UTC,0d 00h 07m 01s,system,local,notice,Decoder 4 ok
15,25 Oct 2010 09:32:45 UTC,0d 00h 06m 58s,system,local,error,Decoder 4 no video data
16,25 Oct 2010 09:32:40 UTC,0d 00h 06m 53s,user,192.168.1.40,info,TV Service 2 changed
```

Figure 23: System log settings

The SNMP MIBs available are stored on the U 124 and can be downloaded from the device.

The operations in the system log are sorted by the time they occurred. To delete the log file, you set the flag for “Check box to clear log on refresh”, then click on the “Refresh” button. The first entry in the log is then the deletion operation, together with the time and the user account, as well as the IP address of the user.

NOTE:

- Downloading the IP configuration via the link “ip.xml”
- System settings via the link “settings.xml”
- System entries via the link “status.xml”
- Module information via the link “module.xml”



14 Statistics

Clicking on the “Statistics” submenu takes you to the statistics for the data transfer of the U 124. Here all the statistics relevant to the operation of the device and its analysis are displayed.

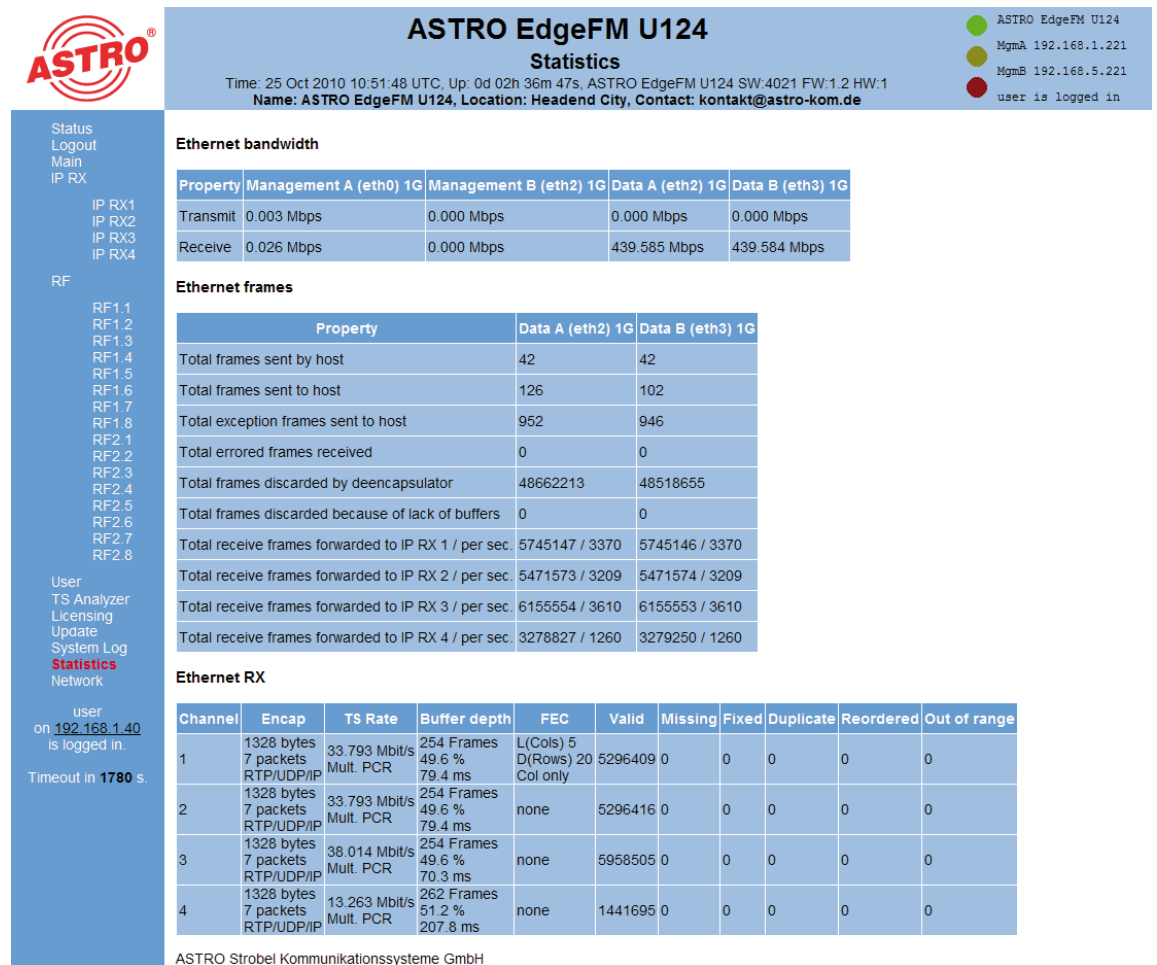



Figure 24: Statistics for the data transfer

15 Network properties

You reach the network properties by clicking the “Network Monitor” submenu. The properties displayed are purely for information purposes, and are used to describe the network.



ASTRO EdgeFM U124

Network Monitor

Time: 25 Oct 2010 10:51:48 UTC, Up: 0d 02h 36m 47s, ASTRO EdgeFM U124 SW:4021 FW:1.2 HW:1
Name: ASTRO EdgeFM U124, Location: Headend City, Contact: kontakt@astro-kom.de

● ASTRO EdgeFM U124

● MgmA 192.168.1.221

● MgmB 192.168.5.221

● user is logged in

Status
Logout
Main
IP RX

IP RX1
IP RX2
IP RX3
IP RX4

RF

RF1.1
RF1.2
RF1.3
RF1.4
RF1.5
RF1.6
RF1.7
RF1.8
RF2.1
RF2.2
RF2.3
RF2.4
RF2.5
RF2.6
RF2.7
RF2.8

User
TS Analyzer
Licensing
Update
System Log
Statistics
Network

user
on 192.168.1.40
is logged in.
Timeout in 1780 s.

Logical Interfaces

Interface	Status	
eth2	Flags	UP BROADCAST RUNNING SIMPLEX MULTICAST
	Address	172.24.0.133
	Broadcast	172.24.255.255
eth3	Flags	UP BROADCAST RUNNING SIMPLEX MULTICAST
	Address	172.25.0.133
	Broadcast	172.25.255.255
eth0	Flags	UP BROADCAST RUNNING SIMPLEX MULTICAST
	Address	192.168.1.133
	Broadcast	192.168.1.255
lo0	Flags	UP LOOPBACK RUNNING MULTICAST
	Address	127.0.0.1

Protocols

IPv4		ICMPv4		IGMP		UDP		TCP																																																																																																							
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2">Received</th></tr> <tr><td>Total</td><td>3437</td></tr> <tr><td>Bad</td><td>0</td></tr> <tr><td>Reassembled</td><td>0</td></tr> <tr><td>Delivered</td><td>3433</td></tr> <tr><td colspan="2">Sent</td></tr> <tr><td>Total</td><td>3561</td></tr> <tr><td>Raw</td><td>0</td></tr> <tr><td>Fragmented</td><td>0</td></tr> </table>		Received		Total	3437	Bad	0	Reassembled	0	Delivered	3433	Sent		Total	3561	Raw	0	Fragmented	0	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2">Received</th></tr> <tr><td>ECHO</td><td>0</td></tr> <tr><td>ECHO REPLY</td><td>0</td></tr> <tr><td>UNREACH</td><td>0</td></tr> <tr><td>REDIRECT</td><td>0</td></tr> <tr><td>Other</td><td>0</td></tr> <tr><td colspan="2">Sent</td></tr> <tr><td>ECHO</td><td>0</td></tr> <tr><td>ECHO REPLY</td><td>0</td></tr> <tr><td>UNREACH</td><td>0</td></tr> <tr><td>REDIRECT</td><td>0</td></tr> <tr><td>Other</td><td>0</td></tr> </table>		Received		ECHO	0	ECHO REPLY	0	UNREACH	0	REDIRECT	0	Other	0	Sent		ECHO	0	ECHO REPLY	0	UNREACH	0	REDIRECT	0	Other	0	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2">Received</th></tr> <tr><td>Total</td><td>0</td></tr> <tr><td>Too long</td><td>0</td></tr> <tr><td>Too short</td><td>0</td></tr> <tr><td>Bad sum</td><td>0</td></tr> <tr><td>Queries</td><td>0</td></tr> <tr><td>Bad queries</td><td>0</td></tr> <tr><td>Reports</td><td>0</td></tr> <tr><td>Bad reports</td><td>0</td></tr> <tr><td>Our reports</td><td>0</td></tr> <tr><td colspan="2">Sent</td></tr> <tr><td>Reports</td><td>64</td></tr> </table>		Received		Total	0	Too long	0	Too short	0	Bad sum	0	Queries	0	Bad queries	0	Reports	0	Bad reports	0	Our reports	0	Sent		Reports	64	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2">Received</th></tr> <tr><td>Total</td><td>7</td></tr> <tr><td>Bad</td><td>4</td></tr> <tr><td colspan="2">Sent</td></tr> <tr><td>Total</td><td>4</td></tr> </table>		Received		Total	7	Bad	4	Sent		Total	4	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><th colspan="2">Connections</th></tr> <tr><td>Initiated</td><td>86</td></tr> <tr><td>Accepted</td><td>549</td></tr> <tr><td>Established</td><td>635</td></tr> <tr><td>Closed</td><td>689</td></tr> <tr><td colspan="2">Received</td></tr> <tr><td>Packets</td><td>3427</td></tr> <tr><td>Data Packets</td><td>1097</td></tr> <tr><td>Bytes</td><td>209167</td></tr> <tr><td colspan="2">Sent</td></tr> <tr><td>Packets</td><td>3495</td></tr> <tr><td>Data Packets</td><td>1647</td></tr> <tr><td>Bytes</td><td>2014513</td></tr> </table>		Connections		Initiated	86	Accepted	549	Established	635	Closed	689	Received		Packets	3427	Data Packets	1097	Bytes	209167	Sent		Packets	3495	Data Packets	1647	Bytes	2014513
		Received																																																																																																													
Total	3437																																																																																																														
Bad	0																																																																																																														
Reassembled	0																																																																																																														
Delivered	3433																																																																																																														
Sent																																																																																																															
Total	3561																																																																																																														
Raw	0																																																																																																														
Fragmented	0																																																																																																														
Received																																																																																																															
ECHO	0																																																																																																														
ECHO REPLY	0																																																																																																														
UNREACH	0																																																																																																														
REDIRECT	0																																																																																																														
Other	0																																																																																																														
Sent																																																																																																															
ECHO	0																																																																																																														
ECHO REPLY	0																																																																																																														
UNREACH	0																																																																																																														
REDIRECT	0																																																																																																														
Other	0																																																																																																														
Received																																																																																																															
Total	0																																																																																																														
Too long	0																																																																																																														
Too short	0																																																																																																														
Bad sum	0																																																																																																														
Queries	0																																																																																																														
Bad queries	0																																																																																																														
Reports	0																																																																																																														
Bad reports	0																																																																																																														
Our reports	0																																																																																																														
Sent																																																																																																															
Reports	64																																																																																																														
Received																																																																																																															
Total	7																																																																																																														
Bad	4																																																																																																														
Sent																																																																																																															
Total	4																																																																																																														
Connections																																																																																																															
Initiated	86																																																																																																														
Accepted	549																																																																																																														
Established	635																																																																																																														
Closed	689																																																																																																														
Received																																																																																																															
Packets	3427																																																																																																														
Data Packets	1097																																																																																																														
Bytes	209167																																																																																																														
Sent																																																																																																															
Packets	3495																																																																																																														
Data Packets	1647																																																																																																														
Bytes	2014513																																																																																																														

Mbufs

Summary		Types	
Mbufs	19		
Clusters	12	FREE	17
Free Clusters	11	DATA	2
Drops	0	HEADER	0
Waits	0	SONAME	0
Drains	0	FTABLE	0
Copy Fails	0		
Pullup Fails	0		

ASTRO Strobel Kommunikationssysteme GmbH

Figure 25: Example view of the network properties in the “Network Monitor” submenu

16 Logout

Clicking on the “Logout” submenu (only available when you are logged in) takes you to the logout of the U 124.

User Logout

Are you sure?




Figure 26: Logging out of the U 124


If you confirm the request by clicking “Yes”, you are logged out. No further settings can be made without logging in again, but you do have the option to view the settings of the U 124. However, the setting elements are inactive.

17 Technical data



Type	U 100 - 48		U 100 - 230
Order number		380 100	380 101
Network interfaces (forwarded passively to U 1xx)			
Management		2 x 100 Base-T Ethernet (RJ 45)	
Data		2 x 1000 Base-T Ethernet (RJ 45)	
Protocol		IEEE802.3 Ethernet, RTP, ARP, IPv4, TCP/UDP, HTTP, SNMP, IGMPv3	
Transport stream processing			
TS capsulation		UDP, UDP / RTP, 1-7 packets, FEC	
Transport stream processing		transparent (188 or 204 packets)	
Control and management			
Properties		Control via HTTP / WEB	
Protocol		HTTP / SNMP (error messages)	
General data			
Input voltage	[V]	- 48 V DC	100 - 230 V AC
Power consumption	[W]	depends on equipment	
Housing		19" / 1 HE	
Permitted ambient temperature	[°C]	0...+45	

Type		U 124
Order number		380 124
Network interfaces (forwarded passively to U 1xx)		
Management		2 x 100 Base-T Ethernet (RJ 45)
Data		2 x 1000 Base-T Ethernet (RJ 45)
Protocol		IEEE802.3 Ethernet, RTP, ARP, IPv4, TCP/UDP, HTTP, SNMP, IGMPv3
Transport stream processing		
TS capsulation		UDP, UDP / RTP, 1-7 packets, FEC
Transport stream processing		transparent (188 or 204 packets)
Audio decoding		MPEG 1 Layer 2, Stereo
FM modulator		
Output frequency	[MHz]	87.5 - 108
Step size	[kHz]	10
RDS data static dynamic		UECP, ancillary data / sep. PID PS 2 x 8 characters Pi / Radiotext / PTY / PS / CT / MS
Output level	[dBμV]	114
Intermodulation interval	[dBc]	> 70
Reflexion loss	[dB]	> 14
Signal-to-noise voltage ratio	[dB]	> 65
External voltage ratio	[dB]	> 72
Pre-emphasis	[μs]	50
Stereo crosstalk attenuation	[dB]	60
Distortion factor	[%]	< 0.05
Frequency response	[dB]	< 1
General data		
Power consumption	[W]	30
Housing		19", 1 HE
Permitted ambient temperature	[°C]	0...+45







ASTRO Strobel Kommunikationssysteme GmbH
Olefant 1–3, D-51427 Bergisch Gladbach (Bensberg)
Tel.: 02204/405-0, Fax: 02204/405-10
eMail: kontakt@astro-kom.de, www.astro-kom.de

82251 401 12/2011